

CREDENTIAL DESIGNS



ENTRUST


SECURING A WORLD IN MOTION

Credential Designs

Credential designs set the graphics and fields on a credential. The fields on the credential design set the fields in the enrollment form.

Create a Credential Design

To create a **Credential Design**, click on the **Main Menu** icon at the top left corner of the screen.

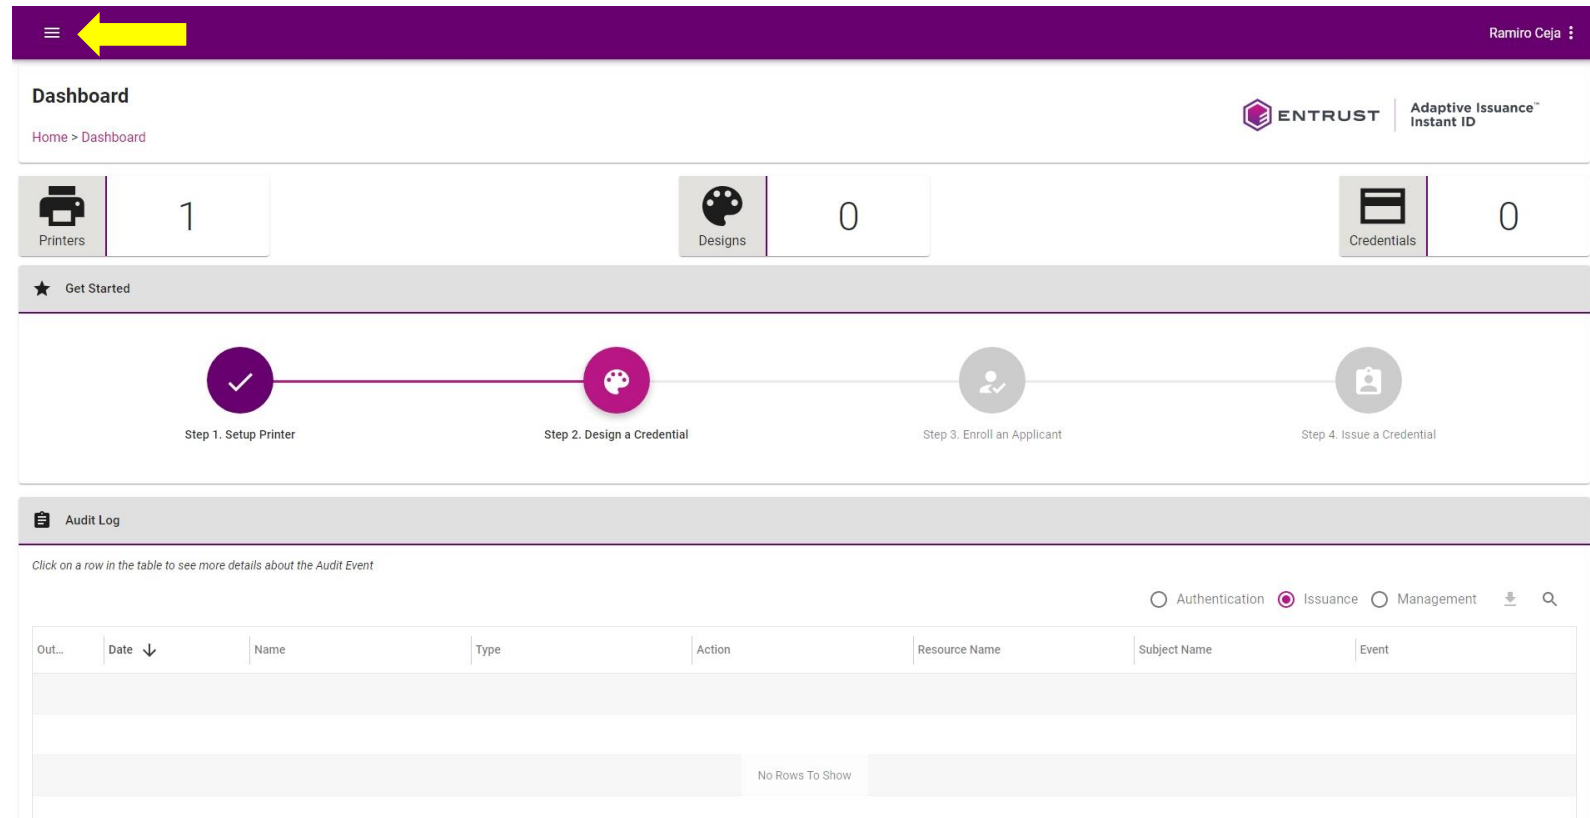

The screenshot shows the Entrust dashboard interface. At the top, a purple navigation bar contains a 'Main Menu' icon (three horizontal lines) on the left, which is highlighted with a yellow arrow, and the user name 'Ramiro Ceja' on the right. Below the navigation bar, the 'Dashboard' section displays the breadcrumb 'Home > Dashboard' and the Entrust logo with the tagline 'Adaptive Issuance™ Instant ID'. A row of three cards shows 'Printers' (1), 'Designs' (0), and 'Credentials' (0). The 'Designs' card is highlighted. Below this is a 'Get Started' section with a progress bar showing four steps: 'Step 1. Setup Printer' (completed), 'Step 2. Design a Credential' (active), 'Step 3. Enroll an Applicant', and 'Step 4. Issue a Credential'. The 'Audit Log' section is visible below, with a table header and a 'No Rows To Show' message.

Out...	Date ↓	Name	Type	Action	Resource Name	Subject Name	Event
No Rows To Show							


Create a Credential Design

Select **Credential Designs**.

The screenshot displays the Entrust web application interface for Credential Designs. On the left, a navigation sidebar lists various menu items: Dashboard, Credentials, Credential Designs (highlighted with a yellow arrow), Enrollment Designs, Mobile Flash Pass Designs, Printers, Print Queue, Bulk Operations, and Administration. The main content area features a purple header with the user name 'Ramiro Ceja' and a back arrow. Below the header, the page title 'Credential Designs' is shown, along with a breadcrumb 'Home > Credential Designs'. The Entrust logo and 'Adaptive Issuance™ Instant ID' are positioned in the top right. A search bar with the placeholder text 'Type text to filter...' is present. A purple plus icon is located in the main content area. The footer contains copyright information: '© 2020 Entrust Corporation. All rights reserved.' and a URL: 'https://training2.us.dev.trustedauthdev.com/#/credentialdesigns'. The Entrust logo is also present in the bottom right corner.

Create a Credential Design


From the **Credential Designs** page, click on the **Add** icon.

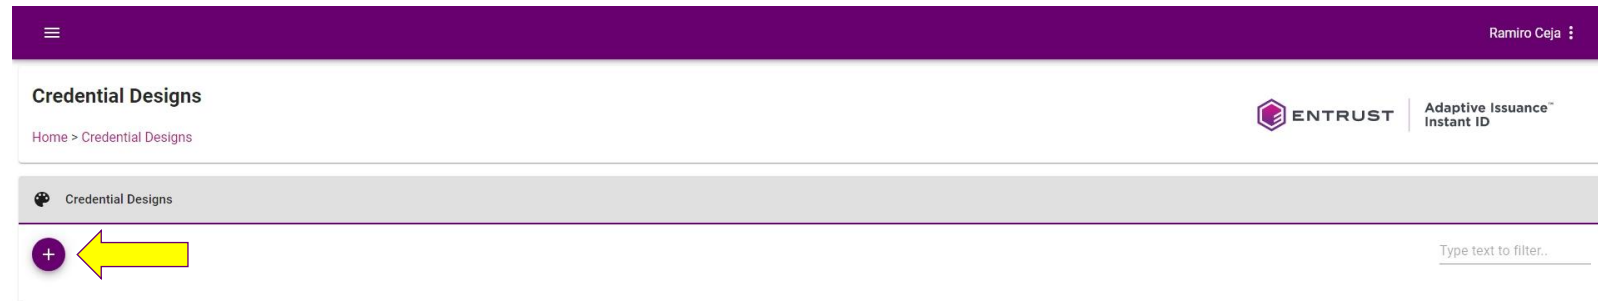

Create a Credential Design

Select a **Credential Design** template.

- To create a credential design using a blank template, click **Blank**.
- To create a credential design using a template with fields, select a template.

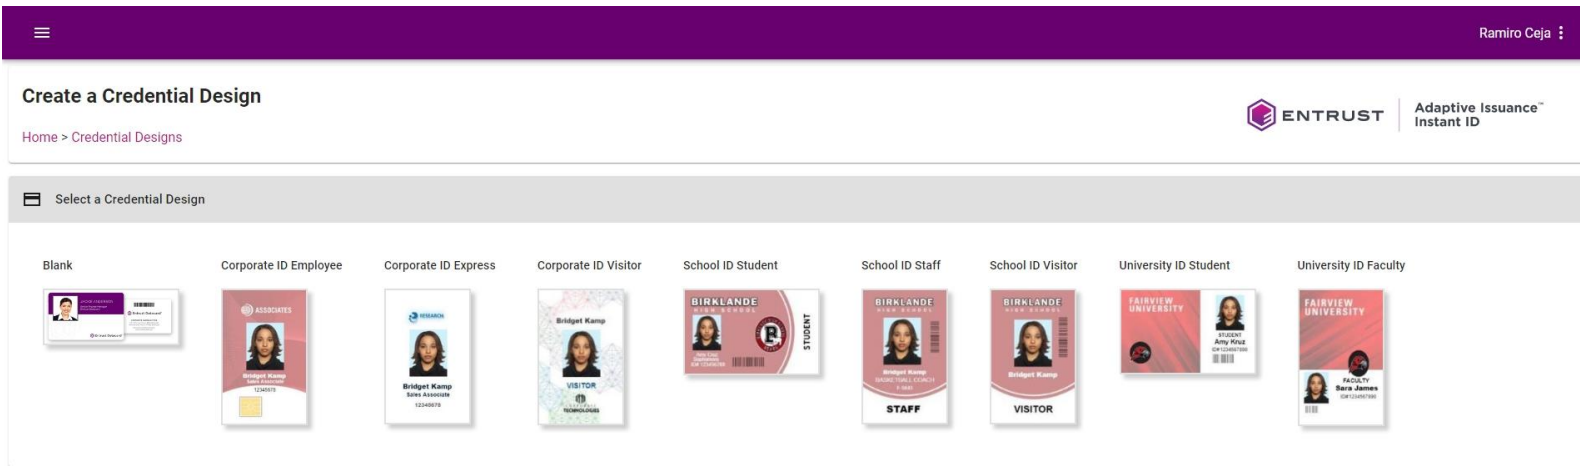

Create a Credential Design

The **Credential Designer** opens.


The screenshot displays the Entrust Credential Designer web application. The interface includes a purple header with the user name 'Ramiro Ceja' and the Entrust logo. The main content area is titled 'Credential Designer' and shows a design canvas for 'Credential Design 1'. The canvas is currently blank with a light gray grid background. A toolbar at the top of the canvas provides various design tools such as selection, text, image, and shape tools. On the right side, a 'Card Settings' panel is visible, containing fields for Card Name, Description, Units (set to Inches), Card Dimensions (ISO-ID-1), Width (3.3750), Height (2.1250), and options for Printer Actions (Rewritable, Tactile Front, Tactile Back) and Print orientation (180 degrees, Front, Back, Auto).

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build



Create a Credential Design

To save changes to a credential design, click on the **Save** icon.

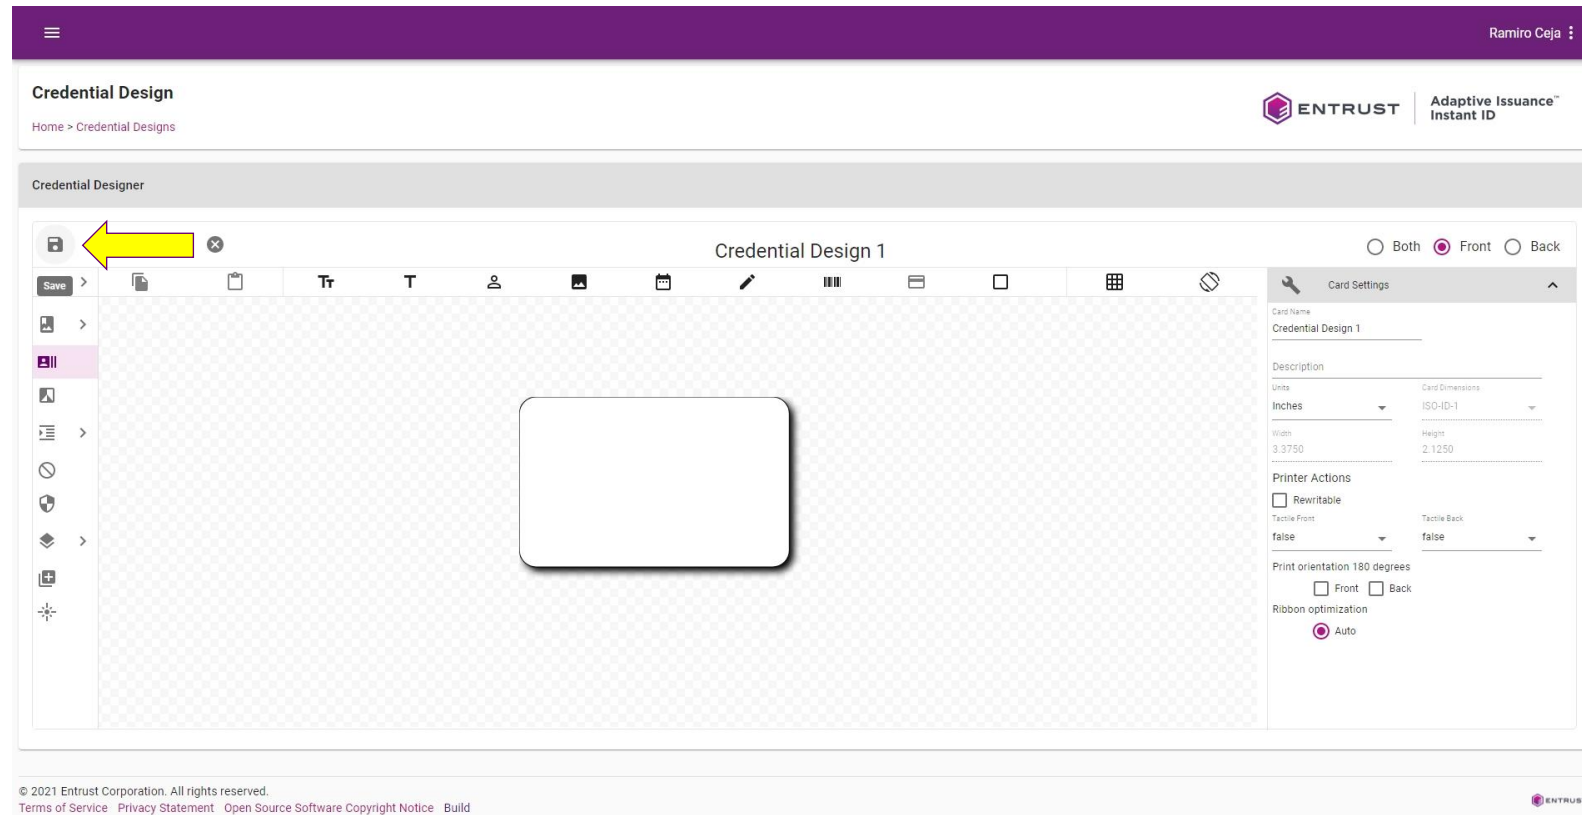

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with a menu icon on the left and the user name "Ramiro Ceja" on the right. Below the header, the page title "Credential Design" is shown, along with a breadcrumb "Home > Credential Designs" and the Entrust logo with the text "Adaptive Issuance™ Instant ID". The main workspace is titled "Credential Designer" and "Credential Design 1". A yellow arrow points to the "Save" icon in the top-left corner of the design area. The design area itself contains a large white rounded rectangle on a light gray grid background. On the right side, there is a "Card Settings" panel with various options: "Card Name" (Credential Design 1), "Description", "Units" (Inches), "Card Dimensions" (ISO-ID-1), "Width" (3.3750), "Height" (2.1250), "Printer Actions" (Rewritable, Tactile Front, Tactile Back), "Print orientation 180 degrees" (Front, Back), and "Ribbon optimization" (Auto). The footer contains copyright information: "© 2021 Entrust Corporation. All rights reserved." and links for "Terms of Service", "Privacy Statement", "Open Source Software Copyright Notice", and "Build".

Note: As you are creating your Credential Design, you want to save often to avoid losing changes.

Create a Credential Design

To save a credential design with a different file name, click on the **Save As** icon.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the user name 'Ramiro Ceja' and the Entrust logo. Below the header, the page title is 'Credential Design' with a breadcrumb 'Home > Credential Designs'. The main workspace is titled 'Credential Designer' and 'Credential Design 1'. A yellow arrow points to the 'Save As' icon in the top toolbar. The central area shows a blank white rounded rectangle on a light gray grid background. On the right, the 'Card Settings' panel is visible, showing fields for Card Name, Description, Units (Inches), Card Dimensions (ISO-ID-1), Width (3.3750), Height (2.1250), and Printer Actions (Rewritable, Tactile Front, Tactile Back, Print orientation 180 degrees, Ribbon optimization).

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Create a Credential Design


To print a sample credential to view how the credential design will appear on a printed card, click on the **Print Sample** icon.

The screenshot displays the Entrust Credential Designer web application. The interface includes a top navigation bar with the Entrust logo and 'Adaptive Issuance™ Instant ID' branding. The main workspace is titled 'Credential Designer' and shows a central canvas for 'Credential Design 1'. A yellow arrow points to the 'Print Sample' icon in the top toolbar. The right-hand side features a 'Card Settings' panel with fields for Card Name, Description, Units (Inches), Card Dimensions (ISO-ID-1), Width (3.3750), Height (2.1250), and Printer Actions (Rewritable, Tactile Front, Tactile Back, Print orientation 180 degrees, Ribbon optimization). The footer contains copyright information for Entrust Corporation and links to Terms of Service, Privacy Statement, Open Source Software Copyright Notice, and Build.



Create a Credential Design

To generate an enrollment form based on the credential design, click on the **Generate Enrollment** icon.

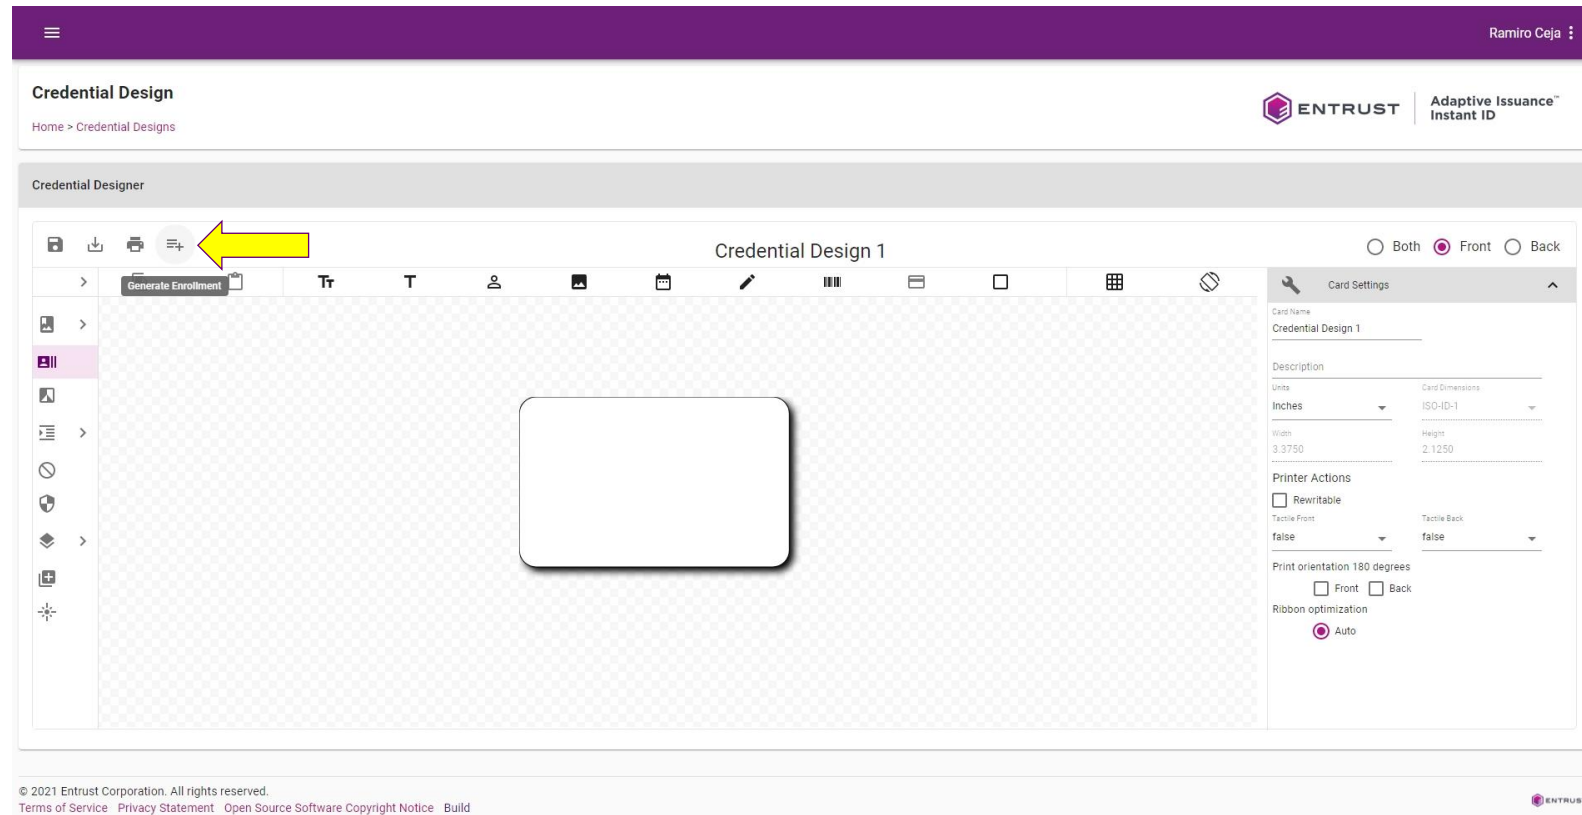

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the page title is "Credential Design" with a breadcrumb "Home > Credential Designs". The main workspace is titled "Credential Designer" and "Credential Design 1". A yellow arrow points to the "Generate Enrollment" icon in the top toolbar. The central area shows a blank credential design template. On the right, the "Card Settings" panel is visible, showing fields for "Card Name", "Description", "Units" (set to Inches), "Card Dimensions" (ISO-ID-1), "Width" (3.3750), "Height" (2.1250), "Printer Actions" (Rewritable, Tactile Front, Tactile Back), "Print orientation 180 degrees" (Front, Back), and "Ribbon optimization" (Auto).

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Create a Credential Design

To close a credential design, click on the **Close** icon.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the page title is "Credential Design" with a breadcrumb "Home > Credential Designs". The main workspace is titled "Credential Designer" and "Credential Design 1". A toolbar at the top of the workspace contains several icons, including a "Close" icon (a square with an 'X') which is highlighted with a yellow arrow. The workspace itself shows a large white rounded rectangle on a light gray grid background. On the right side, there is a "Card Settings" panel with various configuration options such as "Card Name", "Description", "Units", "Card Dimensions", "Width", "Height", "Printer Actions", "Tactile Front", "Tactile Back", "Print orientation 180 degrees", and "Ribbon optimization". The footer of the page contains copyright information: "© 2021 Entrust Corporation. All rights reserved." and links to "Terms of Service", "Privacy Statement", "Open Source Software Copyright Notice", and "Build".

Note: A warning will display before closing if you have made changes to the credential design.

Card Settings

Configure the Card Settings.

1. In the **Card Name** field, enter the name for the credential design.
2. In the **Description** field, enter a description for the credential design.
3. In the **Units** field, select the unit of measure.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with a menu icon, the text "Credential Design", and the user name "Ramiro Ceja". Below the header, the breadcrumb "Home > Credential Designs" is visible. The main workspace is titled "Credential Designer" and "Credential Design 1". A toolbar with various icons is located above the design canvas. The design canvas shows a white rounded rectangle on a light gray grid. On the right side, the "Card Settings" panel is open, showing fields for "Card Name" (Credential Design 1), "Description", "Units" (Inches), "Card Dimensions" (ISO-ID-1), "Width" (3.3750), "Height" (2.1250), "Printer Actions" (Rewritable, Tactile Front, Tactile Back), "Print orientation 180 degrees" (Front, Back), and "Ribbon optimization" (Auto). Three yellow circles with numbers 1, 2, and 3 are overlaid on the "Card Name", "Description", and "Units" fields respectively, corresponding to the steps in the list on the left. The footer contains copyright information: "© 2021 Entrust Corporation. All rights reserved. Terms of Service Privacy Statement Open Source Software Copyright Notice Build".

Card Settings

Configure the options in the Printer Actions area.

- Select **Rewritable** to allow the credential to be rewritten.
- Select **Tactile** to enable tactile printing on cards.
- Select **Front** or **Back** under **Print orientation 180 degrees** to set the print orientation for the card.
- Select the **Ribbon optimization** options. **Auto** allows the printer to enable ribbon optimization based on the conditions of the print job and printer status.

The screenshot displays the Entrust Credential Designer interface. The main workspace shows a blank card design on a grid background. On the right side, the 'Card Settings' panel is open, highlighting the 'Printer Actions' section. The settings in this section are:


- Rewritable:** (unchecked)
- Tactile Front:** (unchecked), value: false
- Tactile Back:** (unchecked), value: false
- Print orientation 180 degrees:** Front, Back
- Ribbon optimization:** Auto

The interface also shows the 'Credential Design 1' title, a toolbar with various design tools, and a navigation menu on the left. The footer contains copyright information for Entrust Corporation.

Configure the Credential Designer

Click on the **Grid** icon to enable the grid.

Grid places horizontal and vertical lines in increments of 1 cm or 1 in.

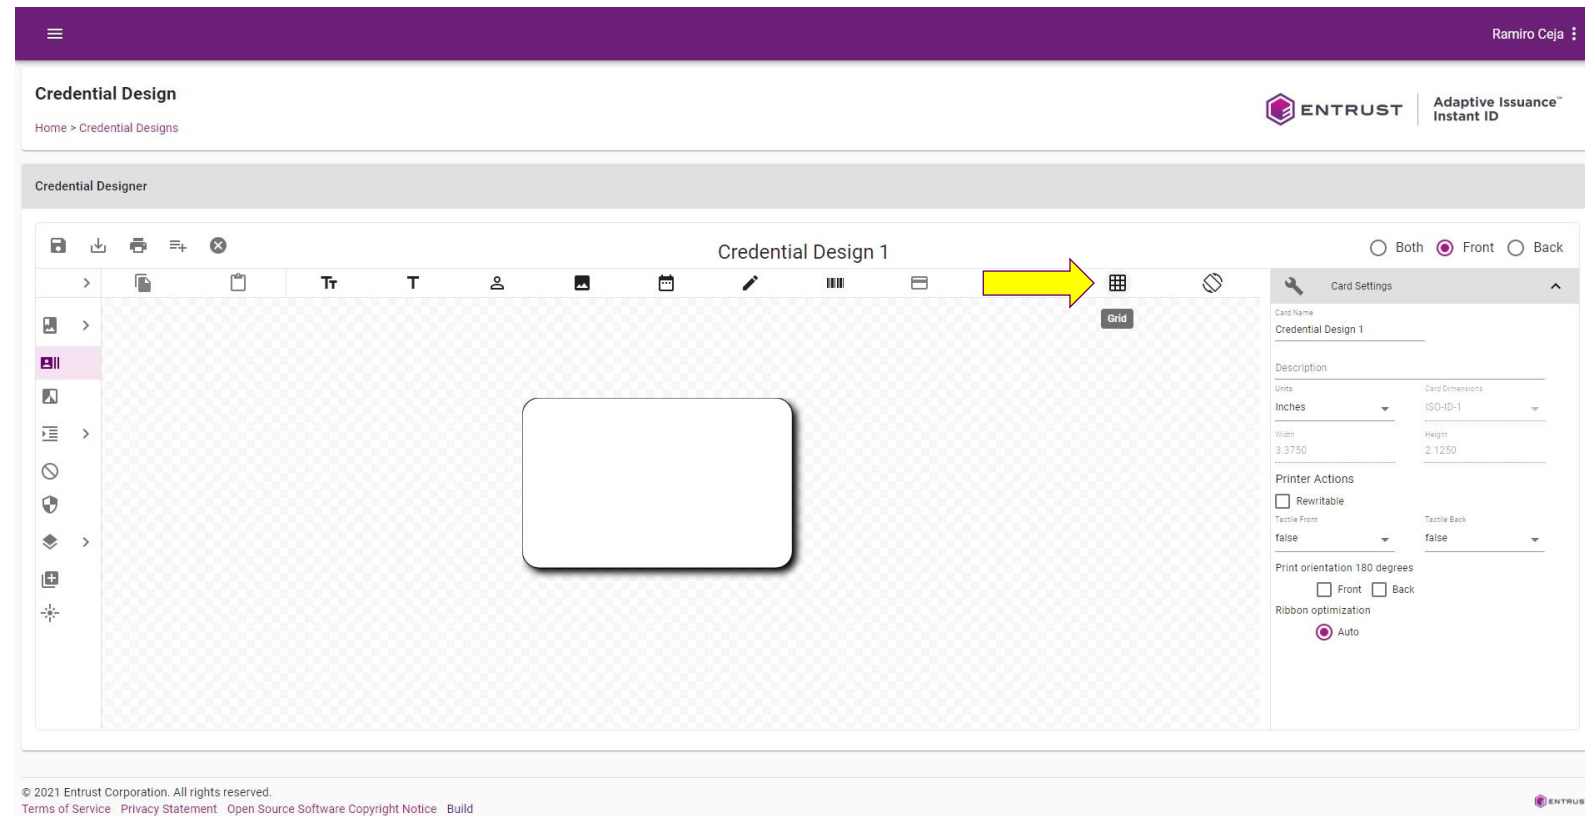


The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Designer" and "Credential Design 1". A yellow arrow points to the "Grid" icon in the top toolbar. The main workspace area is a large white rectangle with a light gray grid pattern. On the right side, there is a "Card Settings" panel with various options for card configuration, including "Units" (Inches), "Card Dimensions" (ISO-ID-1), "Width" (3.3750), "Height" (2.1250), "Printer Actions" (Rewritable, Tactile Front, Tactile Back), "Print orientation 180 degrees" (Front, Back), and "Ribbon optimization" (Auto).

Configure the Credential Designer

Click on the **Rotate** icon, to rotate the credential.

Rotate rotates the selected side of the credential 90 degrees clockwise.

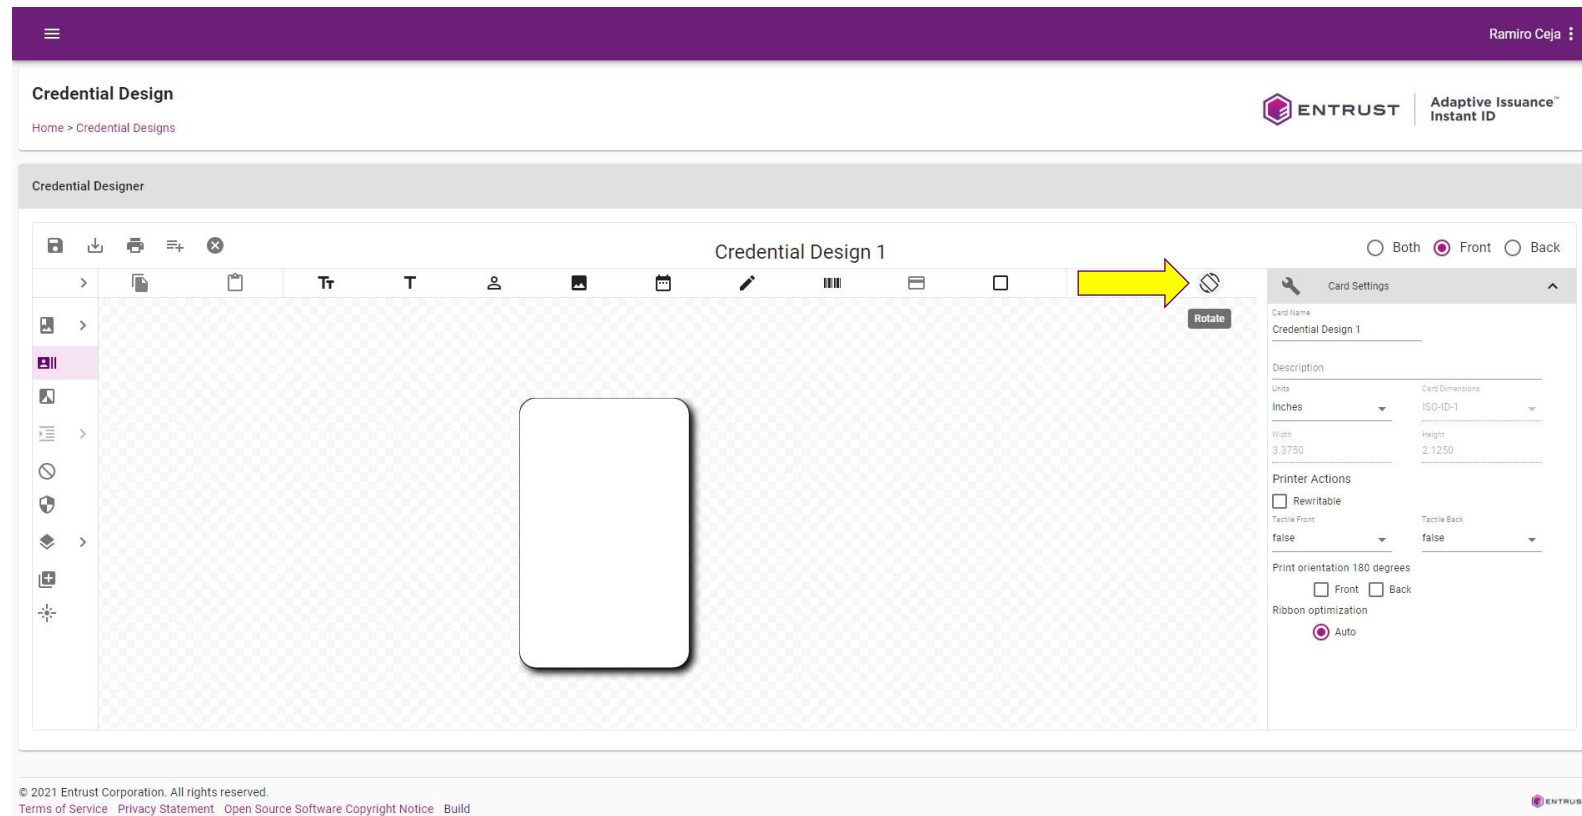

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Designer" and "Credential Design 1". A yellow arrow points to the "Rotate" button in the top right corner of the workspace. The workspace contains a central area with a grid pattern and a white rectangular credential design. On the right side, there is a "Card Settings" panel with various configuration options, including "Units" (Inches), "Card Dimensions" (ISO-ID-1), "Width" (3.3750), "Height" (2.1250), "Printer Actions" (Rewritable, Tactile Front, Tactile Back), "Print orientation 180 degrees" (Front, Back), and "Ribbon optimization" (Auto).

Configure the Credential Designer

Select the side(s) of the credential to display.

- Both
- Front
- Back

The screenshot displays the Entrust Credential Designer web application. At the top, the breadcrumb navigation shows 'Home > Credential Designs'. The main workspace is titled 'Credential Designer' and 'Credential Design 1'. A yellow arrow points to the 'Both' radio button in the top right corner, which is selected. The 'Card Settings' panel on the right shows the following configuration:

Card Settings	
Card Name	Credential Design 1
Description	
Units	Inches
Card Dimensions	ISO-ID-1
Width	3.3750
Height	2.1250
Printer Actions	
<input type="checkbox"/> Rewritable	
Tactile Front	false
Tactile Back	false
Print orientation 180 degrees	<input type="checkbox"/> Front <input type="checkbox"/> Back
Ribbon optimization	<input checked="" type="radio"/> Auto

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Layer Properties

The layer properties configure the functionality of the layers on the credential design.

Layer Properties

Click on the arrow above the layers to expand the Layer Properties pane.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Design 1" and features a central canvas with a grid pattern. A yellow arrow points to a small right-pointing arrow icon in the top-left corner of the canvas, which is used to expand the Layer Properties pane. The Layer Properties pane is located on the right side of the interface and contains the following settings:

- Card Name:** Credential Design 1
- Description:** (empty field)
- Units:** Inches
- Card Dimensions:** ISO-ID-1
- Width:** 3.3750
- Height:** 2.1250
- Printer Actions:**
 - Rewritable
 - Tactile Front:** false
 - Tactile Back:** false
- Print orientation 180 degrees:**
 - Front
 - Back
- Ribbon optimization:** Auto

At the bottom of the interface, there is a footer with the text "© 2021 Entrust Corporation. All rights reserved." and links for "Terms of Service", "Privacy Statement", "Open Source Software Copyright Notice", and "Build". The Entrust logo is also present in the bottom right corner.

Layer Properties

Click on the arrow to the right of a layer to expand the layer properties pane for that layer.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Designer" and "Credential Design 1". The interface is divided into several sections: a top toolbar with icons for file operations, a central design canvas, a left-hand "Layers" panel, and a right-hand "Card Settings" panel. The "Layers" panel lists various design elements: Background, Color (highlighted in pink), Black, Emboss/Indent, Non printable area, Durability and Security (with sub-options for Laminated, Topcoat/RTM, and UV/Luster). Three yellow arrows point to the expand arrows (small triangles) to the right of the "Background", "Color", and "Laminated" layers. The "Card Settings" panel on the right shows configuration options for the card, including "Card Name", "Description", "Units" (set to Inches), "Card Dimensions" (ISO-ID-1), "Width" (3.3750), "Height" (2.1250), "Printer Actions" (Rewritable, Tactile Front, Tactile Back), "Print orientation 180 degrees" (Front, Back), and "Ribbon optimization" (Auto).

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Background Layer

The **Background** layer sets a color or static image as the background of the credential. The **Background** layer supports the following fields:

- Static Text
- Static Image
- Rectangle

Background Layer

Click on the arrow to the right of the layer to expand the layer properties pane.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Designer" and "Credential Design 1". On the left side, there is a "Layers" panel with a list of layers: Background, Color, Black, Emboss/Indent, Non printable area, Durability and Security, Laminate, Topcoat/RTM, and UV/Luster. A yellow arrow points to the right-pointing arrow next to the "Background" layer, indicating that clicking it will expand the layer's properties pane. The main workspace shows a dark gray background with a white rounded rectangle in the center. On the right side, there is a "Card Settings" panel with various options for card dimensions, printer actions, and ribbon optimization. The footer contains copyright information and links to Terms of Service, Privacy Statement, Open Source Software Copyright Notice, and Build.


Background Layer

Click on **Set Background.**

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with a menu icon, the text 'Credential Design', and the user name 'Ramiro Ceja'. Below the header, the breadcrumb 'Home > Credential Designs' is visible. The main workspace is titled 'Credential Designer' and 'Credential Design 1'. On the left, a 'Layer Properties' panel is open, showing a list of layers. The 'Set Background' option is highlighted with a yellow arrow. Below it are options for 'Color' and 'Image'. The central workspace shows a dark gray background with a rounded rectangular placeholder. On the right, a 'Card Settings' panel is visible, containing fields for 'Card Name', 'Description', 'Units', 'Inches', 'Width', 'Height', 'Printer Actions', 'Print orientation 180 degrees', and 'Ribbon optimization'. The footer contains copyright information: '© 2021 Entrust Corporation. All rights reserved.' and links to 'Terms of Service', 'Privacy Statement', 'Open Source Software Copyright Notice', and 'Build'.

Background Layer


To set a color as the background layer, select **Color** and then select a color from the color selector.

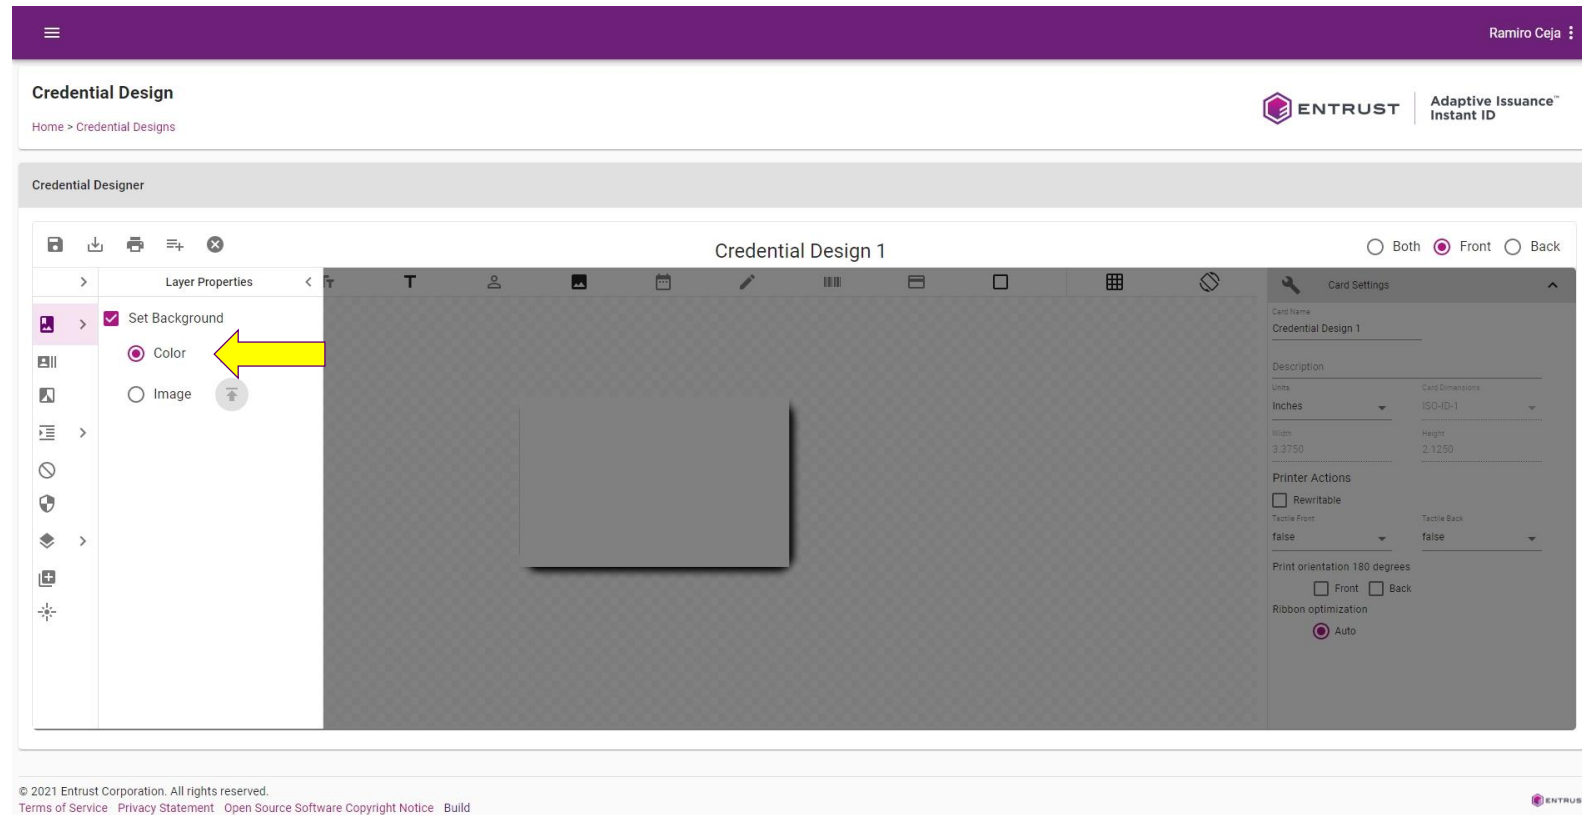

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with a menu icon and the user name 'Ramiro Ceja'. Below the header, the page title is 'Credential Design' with a breadcrumb 'Home > Credential Designs'. The main workspace is titled 'Credential Designer' and 'Credential Design 1'. On the left, the 'Layer Properties' panel is open, showing a 'Set Background' checkbox which is checked. Underneath, the 'Color' radio button is selected, and a yellow arrow points to it. The 'Image' radio button is unselected. The main workspace shows a dark gray background with a white rectangular placeholder. On the right, the 'Card Settings' panel is visible, showing fields for 'Card Name', 'Description', 'Units', 'Inches', 'Width', 'Height', 'Printer Actions', 'Print orientation 180 degrees', and 'Ribbon optimization'. The footer contains copyright information: '© 2021 Entrust Corporation. All rights reserved.' and links for 'Terms of Service', 'Privacy Statement', 'Open Source Software Copyright Notice', and 'Build'.

Background Layer

To set an image as the background layer, select **Image** and then click on the **Upload** icon to upload an image.

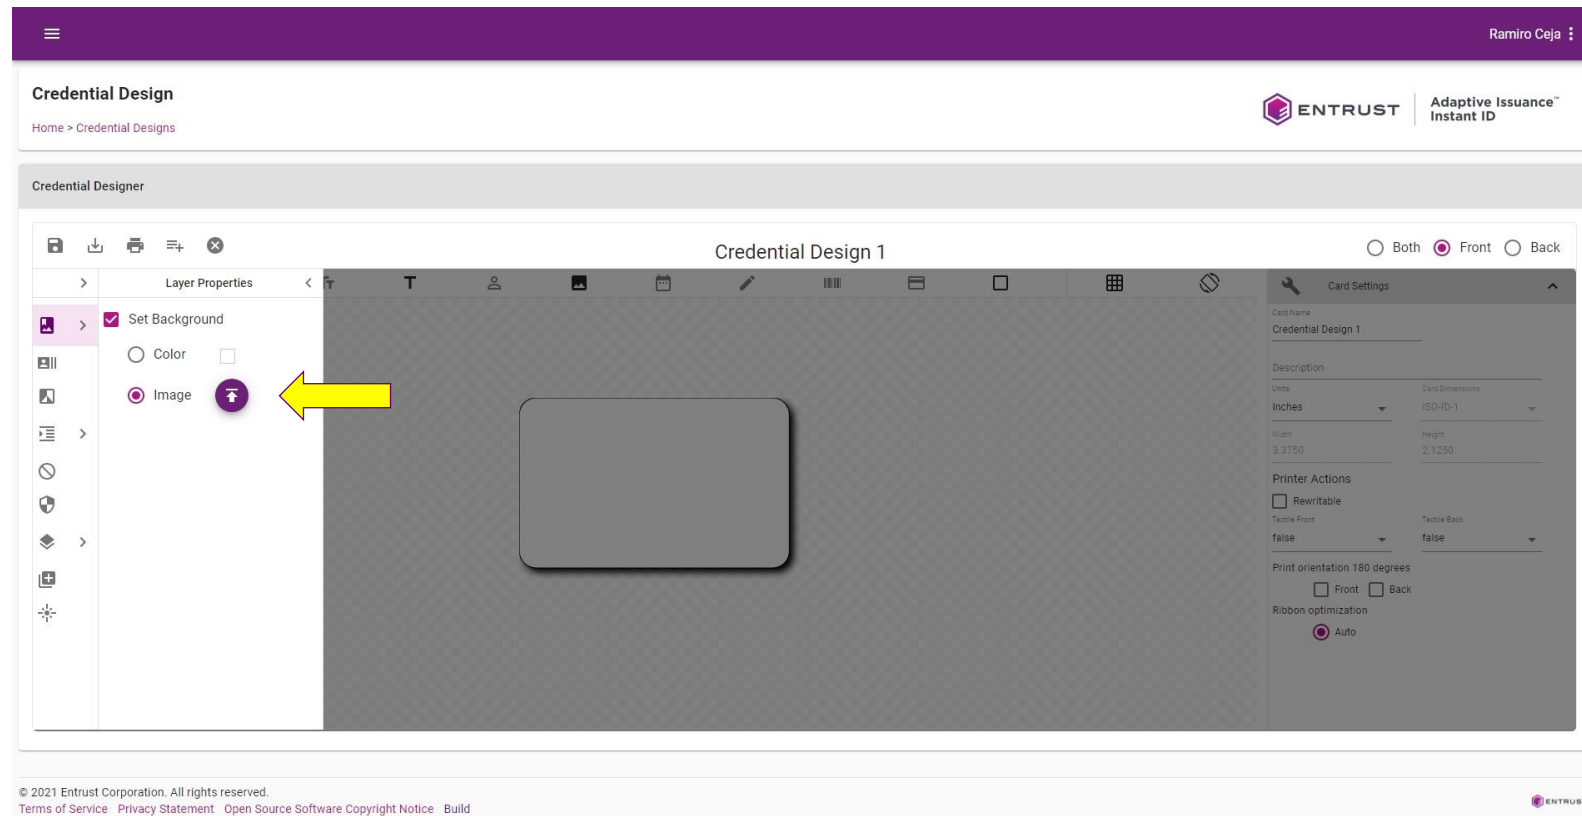

Color Layer

The **Color** layer contains color text, images, or shapes on the credential. The **Color** layer supports the following fields:

- Text
- Static Text
- Photograph
- Static Graphic
- Date
- Signature
- Bar Code
- Rectangle

Black Layer

The **Black** layer contains objects that print in black and white. The **Black** layer supports the following fields:

- Text
- Static Text
- Photograph
- Static Graphic
- Date
- Signature
- Bar Code
- Rectangle
- Magnetic Stripe

Emboss/Indent Layer

The **Emboss/Indent** layer contains text fields that the printer will emboss on the credential. The Emboss/Indent layer supports the following fields:

- Text
- Static Text

Non Printable Area Layer

Use the **Nonprintable area** layer to define areas on the card that must not be printed over. For example, placing a rectangle in the **Nonprintable area** layer over the manual Signature field prevents the printer from printing on top of the Signature field.

When a Rectangle is added to the **Nonprintable area** layer, it displays red and white lines on the screen for design purposes. This Rectangle blocks the contents of all layers except for the Lamination and Topcoat/RTM layers.

Durability and Security Layers

Durability and Security layers apply objects and fields that improve the durability and security of the credential. The **Durability and Security** layers include:


- **Laminate** layer
- **Topcoat/RTM** layer
- **UV/Luster** layer

Laminate Layer

The **Laminate** layer contains options that configure how the printer applies lamination to the credential. Ensure that the printer supports the lamination settings applied on the Laminate layer.

Laminate Layer

Select the checkbox next to the **Laminate** layer to enable the layer.

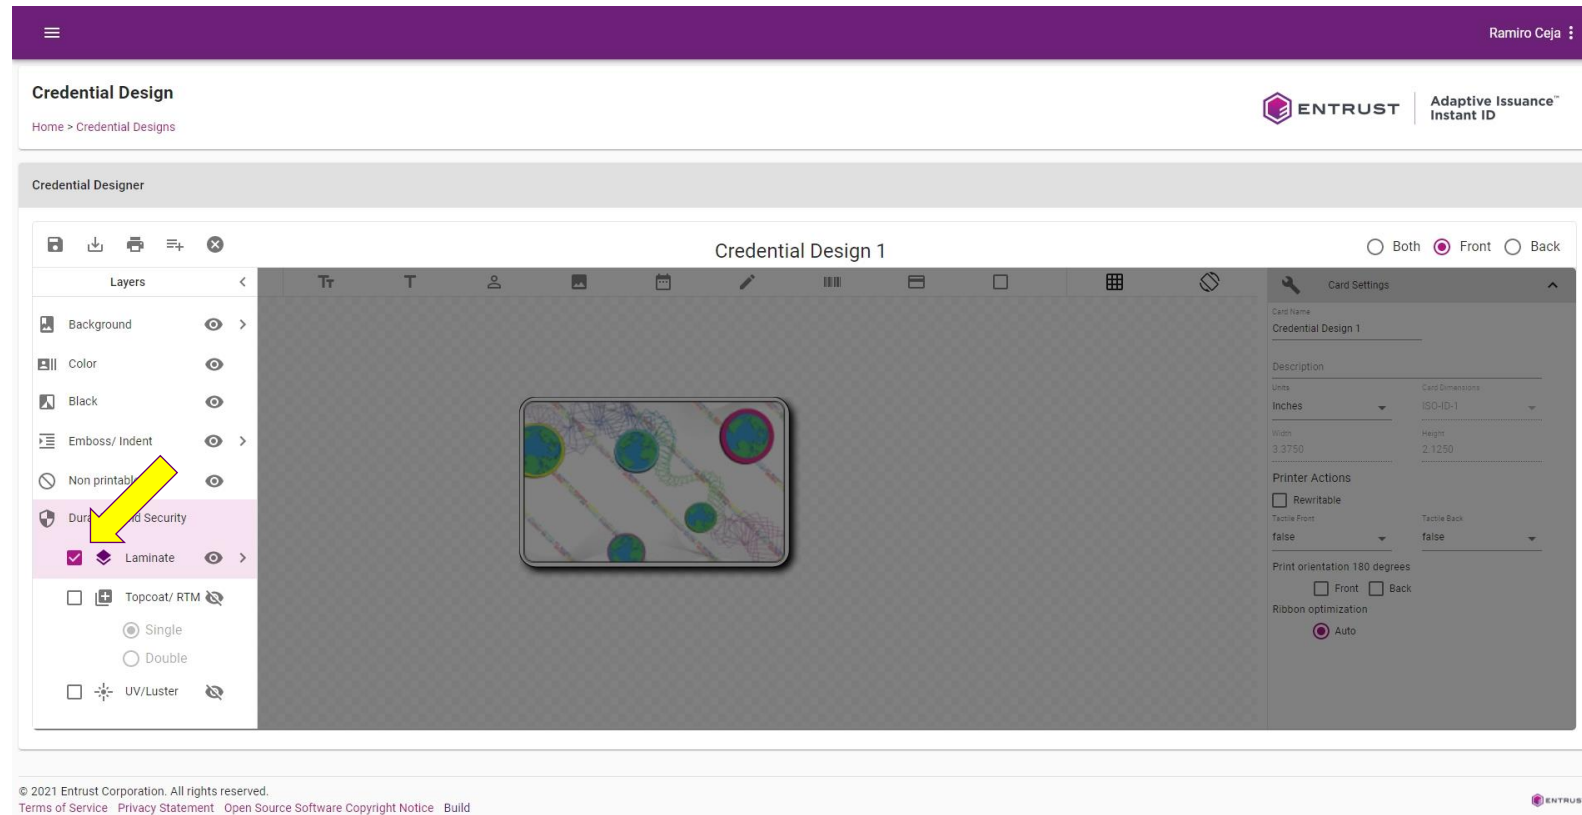


The screenshot displays the Entrust Credential Designer interface. The top navigation bar includes the Entrust logo and the text "Adaptive Issuance™ Instant ID". The main workspace is titled "Credential Design 1" and shows a preview of a credential with a globe pattern. On the left, the "Layers" panel lists various design elements: Background, Color, Black, Emboss/Indent, Non printable, Durability and Security, **Laminate** (checked), Topcoat/RTM (with Single and Double options), and UV/Luster. A yellow arrow points to the checked checkbox next to the "Laminate" layer. On the right, the "Card Settings" panel shows configuration options for the card, including dimensions (3.3750 inches wide by 2.1250 inches high) and printer actions (Rewritable, Tactile Front, Tactile Back, and Ribbon optimization set to Auto).

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Laminate Layer

Click on the arrow to the right of a layer to expand the layer properties pane.

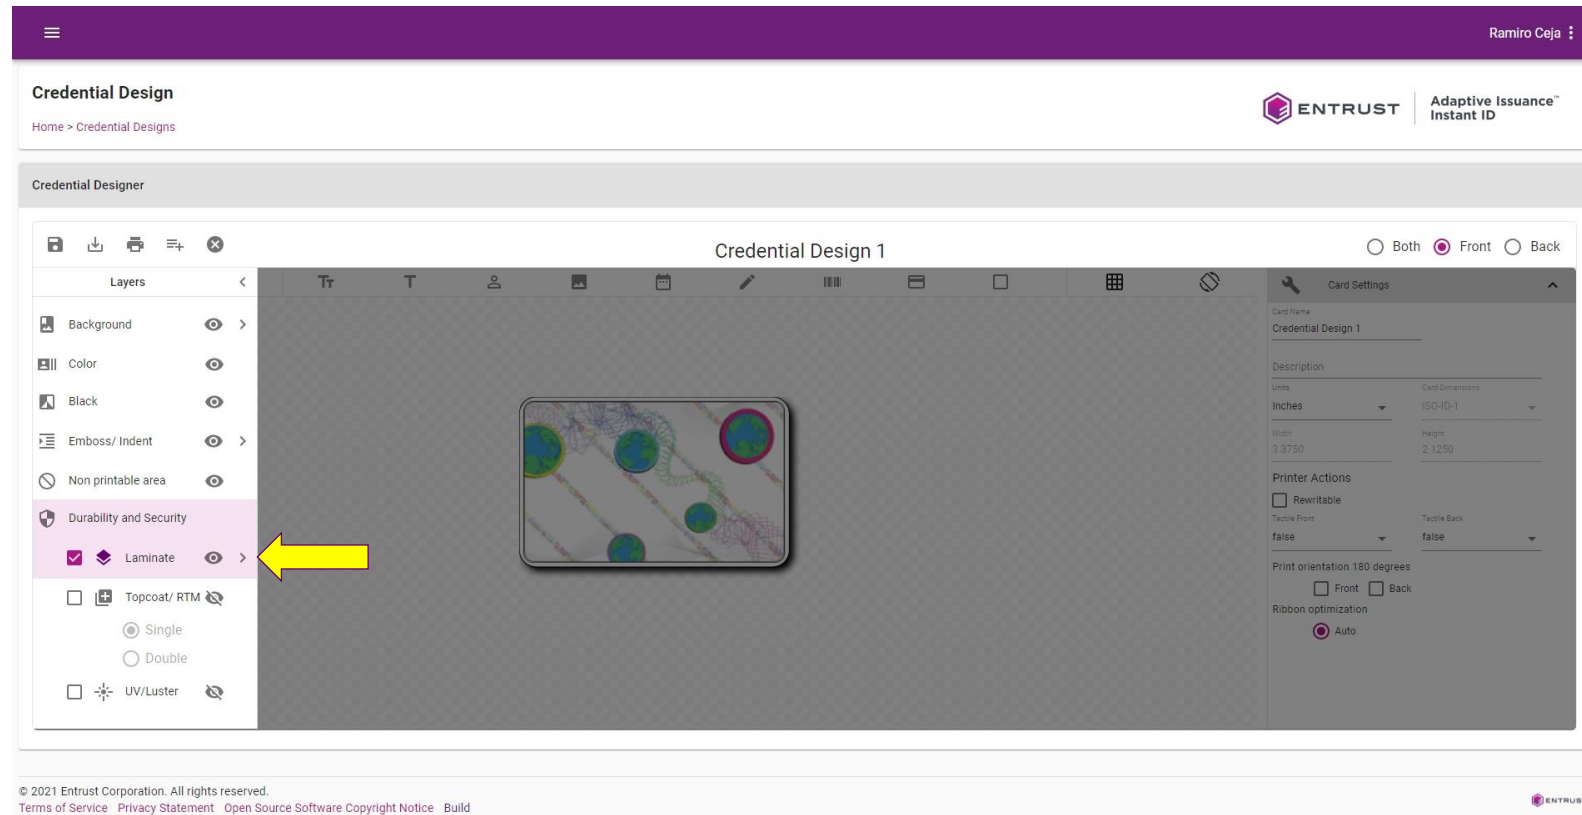

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with a menu icon and the user name "Ramiro Ceja". Below the header, the page title "Credential Design" is shown, along with the Entrust logo and "Adaptive Issuance™ Instant ID". The main workspace is titled "Credential Designer" and "Credential Design 1". On the left, a "Layers" pane lists various design elements: Background, Color, Black, Emboss/Indent, Non printable area, Durability and Security, Laminated, Topcoat/RTM, and UV/Luster. The "Laminated" layer is selected and expanded, showing options for "Single" and "Double" lamination. A yellow arrow points to the right-pointing chevron next to the "Laminated" layer. The central workspace shows a preview of a credential with a globe pattern. On the right, a "Card Settings" pane is visible, containing fields for Card Name, Description, Units (Inches), Card Dimensions (ISO-ID-1), Width (3.3750), Height (2.1250), Printer Actions (Rewritable, Tactile Front, Tactile Back), Print orientation (180 degrees), and Ribbon optimization (Auto).

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Laminate Layer

From the **Laminate 1** and **Laminate 2** drop-down lists select one of the following options:

- Do not use
- Laminate once
- Laminate twice

The screenshot displays the Entrust Credential Designer interface. At the top, the page title is "Credential Design" with a breadcrumb "Home > Credential Designs". The Entrust logo and "Adaptive Issuance™ Instant ID" are in the top right. The main workspace is titled "Credential Designer" and "Credential Design 1". On the left, the "Layer Properties" panel shows two laminate layers: "Laminate 1" with a dropdown set to "Laminate once", and "Laminate 2" with a dropdown set to "Do not use". The central canvas shows a card design with a globe pattern. On the right, the "Card Settings" panel includes fields for "Card Name" (Credential Design 1), "Description", "Units" (Inches), "Card Dimensions" (ISO-ID-1), "Width" (3.3750), and "Height" (2.1250). Under "Printer Actions", "Rewritable" is unchecked, "Tactile Front" is set to "false", and "Tactile Back" is set to "false". "Print orientation 180 degrees" has "Front" and "Back" unchecked. "Ribbon optimization" is set to "Auto". The footer contains copyright information: "© 2021 Entrust Corporation. All rights reserved." and links for "Terms of Service", "Privacy Statement", "Open Source Software Copyright Notice", and "Build".

Topcoat/RTM Layer

The **Topcoat/RTM** layer configures how the printer applies topcoat and retransfer material (RTM) to the credential.

Topcoat/RTM Layer

Select the checkbox next to the **Topcoat/RTM** layer to enable the layer.

The screenshot displays the Entrust Credential Designer interface. The top navigation bar includes the Entrust logo and the text "Adaptive Issuance™ Instant ID". The main workspace is titled "Credential Design 1" and shows a central design area with a grey rounded rectangle. On the left, a "Layers" panel lists various design elements: Background, Color, Black, Emboss/Indent, Non printable area, Durability and Security, Laminate, Topcoat/RTM, and UV/Luster. The "Topcoat/RTM" layer is highlighted in pink, and its checkbox is checked. A yellow arrow points to this checkbox. Below the "Topcoat/RTM" layer, there are radio buttons for "Single" and "Double", with "Single" selected. On the right, a "Card Settings" panel shows fields for Card Name, Description, Units (Inches), Card Dimensions (ISO-ID-1), Width (3.3750), Height (2.1250), and Printer Actions (Rewritable, Tactile Front, Tactile Back). The footer contains copyright information for 2021 Entrust Corporation and links to Terms of Service, Privacy Statement, Open Source Software Copyright Notice, and Build.

Topcoat/RTM Layer

Select **Single** to apply one layer on the credential.

The screenshot displays the Entrust Credential Designer interface. The top navigation bar includes the Entrust logo and the text "Adaptive Issuance™ Instant ID". The main workspace is titled "Credential Design 1" and shows a central design area with a grey rounded rectangle. On the left, a "Layers" panel lists various design elements, with "Topcoat/ RTM" selected and highlighted in pink. Underneath, the "Single" radio button is selected, indicated by a yellow arrow. The right-hand "Card Settings" panel shows configuration options for the card, including dimensions (3.3750 inches width, 2.1250 inches height) and printer actions (Rewritable: false, Tactile Front/Back: false).

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Topcoat/RTM Layer

Select **Double** to apply two layers on the credential.

The screenshot displays the Entrust Credential Designer interface. The main workspace shows a grey rectangular area representing the credential design. On the left, a 'Layers' panel lists various design elements: Background, Color, Black, Emboss/Indent, Non printable area, Durability and Security, Laminate, Topcoat/RTM, and UV/Luster. The 'Topcoat/RTM' layer is selected and expanded, showing two radio button options: 'Single' and 'Double'. A yellow arrow points to the 'Double' option, indicating it should be selected. The 'Card Settings' panel on the right shows details for 'Credential Design 1', including units (Inches), dimensions (Width: 3.3750, Height: 2.1250), and printer actions (Rewritable: false, Tactile Front: false, Tactile Back: false). The 'Print orientation 180 degrees' section has 'Front' and 'Back' options, and the 'Ribbon optimization' section has 'Auto' selected.

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

UV Luster Layer

The **UV Luster** layer contains fields that print on the credential using ultraviolet material.

The **UV Luster** layer supports the following fields:


- Text
- Static Text
- Photograph
- Static Graphic
- Signature

Graphics Fields and Objects

Graphics are fields and objects on the credential design that add to the appearance of the credential design.

Static Graphic Field

To add a **Static Graphic** field, select a layer, click on the **Static Graphic** icon, and then click on the credential design.

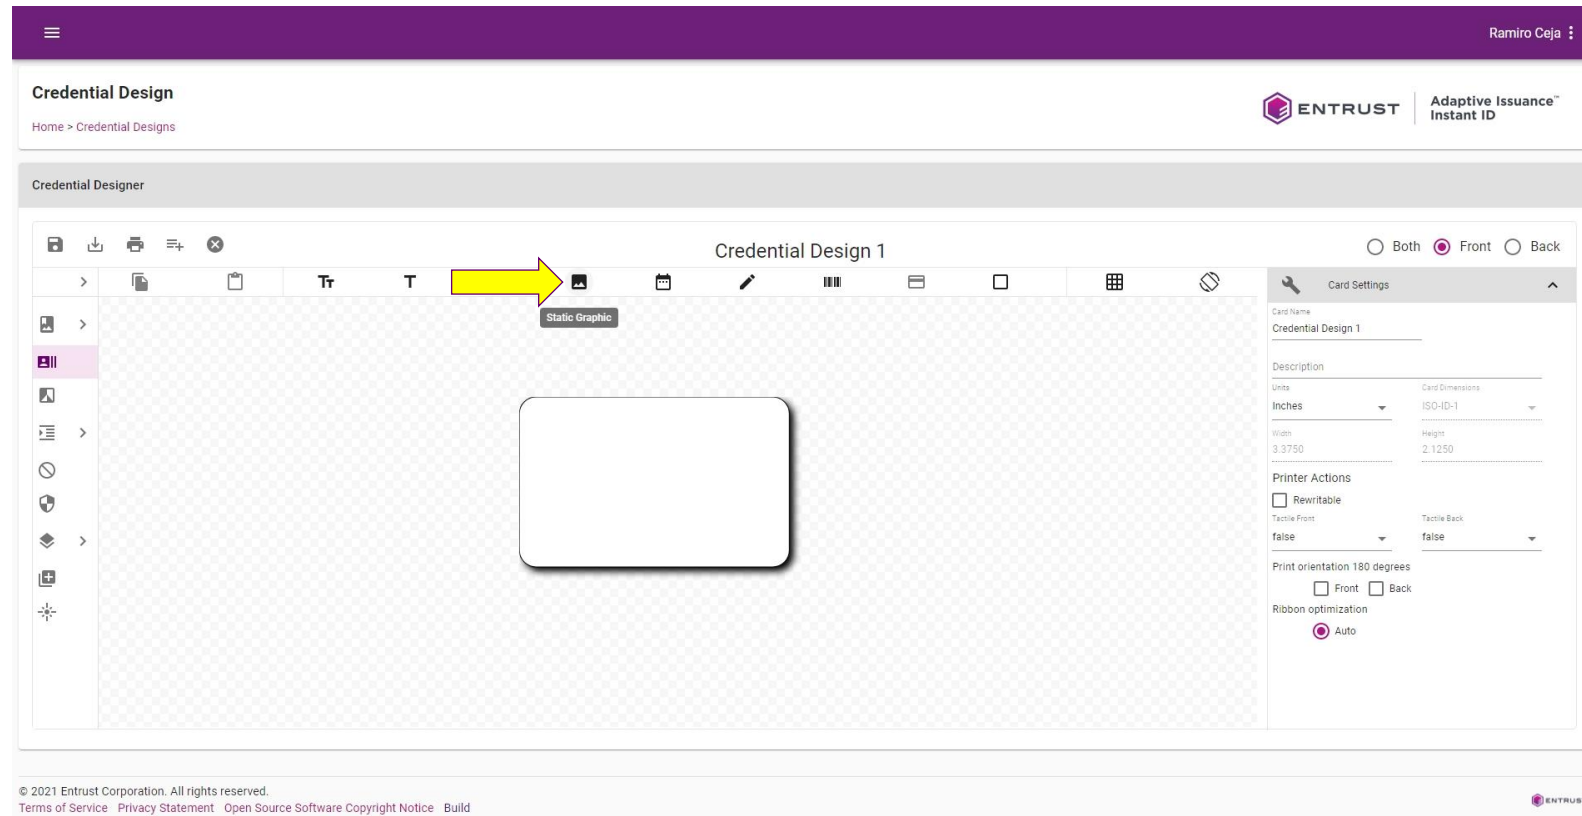

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Designer" and "Credential Design 1". The interface includes a toolbar with various icons for editing and design. A yellow arrow points to the "Static Graphic" icon in the toolbar. On the left side, there is a vertical menu with icons for different design elements. In the center, a white rounded rectangle is placed on a light gray grid background. On the right side, there is a "Card Settings" panel with various configuration options, including "Units" (Inches), "Card Dimensions" (ISO-ID-1), "Width" (3.3750), "Height" (2.1250), "Printer Actions" (Rewritable, Tactile Front, Tactile Back), "Print orientation 180 degrees" (Front, Back), and "Ribbon optimization" (Auto).

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Static Graphic Field

The software places the **Static Graphic** field on the card and displays the **Static Graphic Properties** pane.

The screenshot displays the Entrust Credential Designer interface. At the top, the title bar reads "Credential Design" with a breadcrumb "Home > Credential Designs" and the Entrust logo and "Adaptive Issuance™ Instant ID" on the right. Below this is the "Credential Designer" header. The main workspace shows a card design with a "Static Graphic Field 1" placed on it. A yellow box highlights the "Static Graphic Properties" pane on the right, which is divided into "General" and "Advanced" sections. The "General" section includes a name field, an "Image" selection button, and input fields for Width (1), Left (0.1), Rotation (0), Height (1), and Top (0.1). The "Advanced" section has a "Ghosting" checkbox (unchecked) and a "Percent Opaque" slider set to 50. The bottom of the interface contains a footer with copyright information and links to Terms of Service, Privacy Statement, Open Source Software Copyright Notice, and Build.

Static Graphic Field

Click on the **Upload** icon to select an image.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Design 1" and features a toolbar with various design tools. A central canvas shows a white rounded rectangle on a light gray grid background. To the right of the canvas, a properties panel is open, showing "Static Graphic Properties" for "Static Graphic Field 1". The "General" section includes an "Image" field with a purple upload icon, which is highlighted by a yellow arrow. Below this, there are input fields for "Width" (1), "Left" (0.1), "Rotation" (0), "Height" (1), and "Top" (0.1). The "Advanced" section includes a "Ghosting" checkbox (unchecked) and a "Percent Opaque" slider set to 50%. The footer contains copyright information: "© 2021 Entrust Corporation. All rights reserved." and links to "Terms of Service", "Privacy Statement", "Open Source Software Copyright Notice", and "Build".

Static Graphic Field

Select the image file
and click on **Open**.

The screenshot displays the Entrust Adaptive Issuance Instant ID interface. On the left, a Windows File Explorer window is open, showing the 'Adaptive Issuance Instant ID as a Service' folder. The 'Entrust' file (JPG File, 23 KB) is selected. A yellow arrow points from the 'Open' button in the dialog to the design canvas. The design canvas, titled 'Design 1', shows a grid background with a dashed box indicating the placement of the selected image. On the right, the 'Static Graphic Properties' panel is visible, showing the 'General' tab with the image name 'Static Graphic Field 1' and the 'Image' section. The 'Advanced' section includes a 'Percent Opaque' slider set to 50.

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Static Graphic Field


Configure the **Static Graphic Properties**:

- Enter a name in the **Name** field.
- Modify **Width** and **Length** fields to adjust the size of the field.
- Modify **Left** and **Top** fields to adjust the position of the field.
- Enter a percentage in the **Rotation** field to rotate the field.
- Select **Display the photo semi-opaque** then set the **Percent Opaque** to set the opacity of the field.

The screenshot displays the Entrust Credential Designer interface. The main workspace shows a credential design with a white rectangular field containing the Entrust logo. The right-hand sidebar is open to the 'Static Graphic Properties' panel, which is highlighted with a yellow border. This panel is divided into 'General' and 'Advanced' sections. In the 'General' section, the 'Name' field is set to 'Company Logo'. Below it, there is an 'Image' field with a selection icon. The 'Width' is set to 1, 'Left' to 0.1, and 'Rotation' to 0. The 'Height' is set to 0.25, and 'Top' to 0.1. In the 'Advanced' section, the 'Display the photo semi-opaque' checkbox is checked, and the 'Percent Opaque' slider is set to 50. The top of the interface shows the 'Credential Design' title, the Entrust logo, and the user name 'Ramiro Ceja'. The bottom of the interface contains copyright information: '© 2021 Entrust Corporation. All rights reserved. Terms of Service Privacy Statement Open Source Software Copyright Notice Build'.

Static Text Field

To add a **Static Text** field, select a layer, click on the **Static Text** icon, and then click on the credential design.

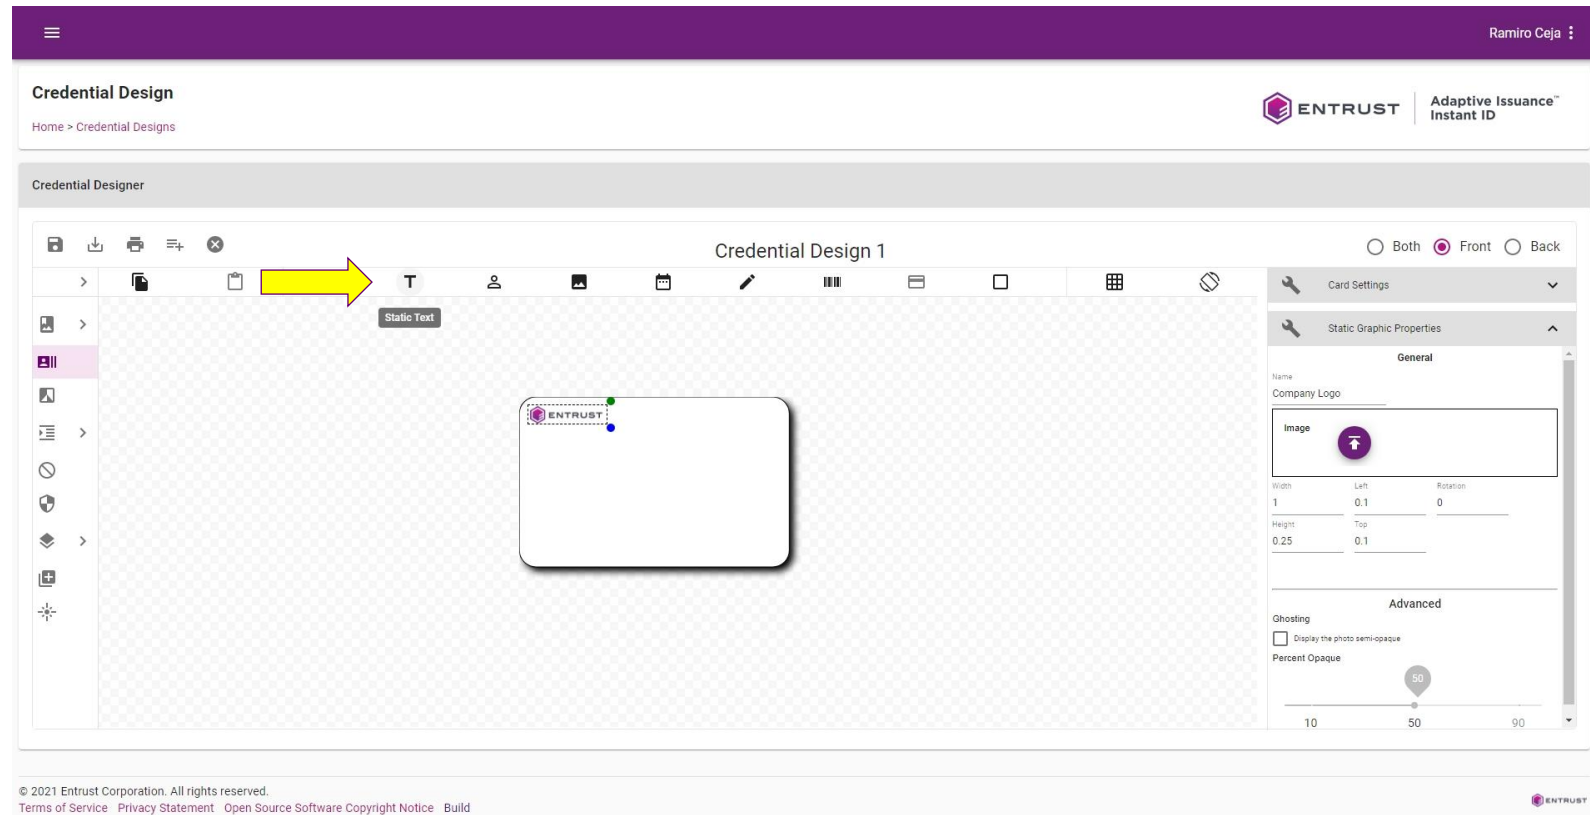

Static Text Field

The software places the **Static Text** field on the card and displays the **Static Text Properties** pane.

The screenshot displays the Entrust Credential Designer interface. At the top, the header includes the Entrust logo and the text "Adaptive Issuance™ Instant ID". The main workspace shows a card design with a "Static Text Field" placed on it. The "Static Text Properties" pane is open on the right, showing the following settings:

- General**
 - Name: Static Text Field 1
 - Sample Data: Static Text Field
 - Width: 1, Left: 0.1, Rotation: 0
 - Height: 0.2083, Top: 0.4
 - Wordwrap Multiline
- Appearance**
 - Font Family: DejaVu Sans
 - Font Style: B I U
 - Font Size: 12
 - Color: [Color Picker]
 - Alignment: [Alignment Options]

At the bottom of the interface, there is a footer with the text: "© 2021 Entrust Corporation. All rights reserved. Terms of Service Privacy Statement Open Source Software Copyright Notice Build".

Static Text Field

Enter static text in the **Display Text** field.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Design 1" and contains a central design area with a grid background. A white rounded rectangle is placed on the grid, containing the Entrust logo and the text "Employee ID". To the right of the design area is a properties panel with two sections: "Card Settings" and "Static Text Properties". The "Static Text Properties" section is expanded to show "General" settings. A yellow arrow points to the "Sample Data" field, which contains the text "Employee ID". Below this, there are input fields for "Width" (1), "Height" (0.2083), "Rotation" (0), and "Top" (0.4). There are also checkboxes for "Wordwrap" and "Multiline". The "Appearance" section below shows "Font Family" set to "DejaVu Sans", "Font Size" set to "12", and "Color" and "Fill" options.

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Static Text Field

Configure the **Static Text Properties**:


- Enter a name in the **Name** field.
- Modify **Width** and **Height** fields to adjust the size of the field.
- Modify **Left** and **Top** fields to adjust the position of the field.
- Enter a percentage in the **Rotation** field to rotate the field.
- Select **Wordwrap** to allow the text in the field to wrap.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Design 1" and shows a central canvas with a grid background. A white rounded rectangle is placed on the canvas, containing the Entrust logo and the text "Employee ID". To the right of the canvas, a "Static Text Properties" panel is open, showing configuration options for the selected text field. The panel is divided into "General" and "Appearance" sections. The "General" section includes fields for Name (Employee ID), Width (1), Left (0.1), Rotation (0), Height (0.2083), and Top (0.4). There are checkboxes for Wordwrap and Multiline. The "Appearance" section includes Font Family (DejaVu Sans), Font Style (B, I, U), Font Size (12), Color, and Alignment options. The bottom of the interface contains a footer with copyright information: "© 2021 Entrust Corporation. All rights reserved. Terms of Service Privacy Statement Open Source Software Copyright Notice Build".

Static Text Field

Configure the **Static Text Properties**:


- Select **Multiline** to allow the text in the field to contain multiple lines.
- Modify the font for the text in the field:
 - Select a **Font Family**.
 - Select a **Font Style**.
 - Enter a **Font Size**.
- Select colors for the **Fill** and **Stroke** to change the color of the field.
- Select the **Alignment** for the field.

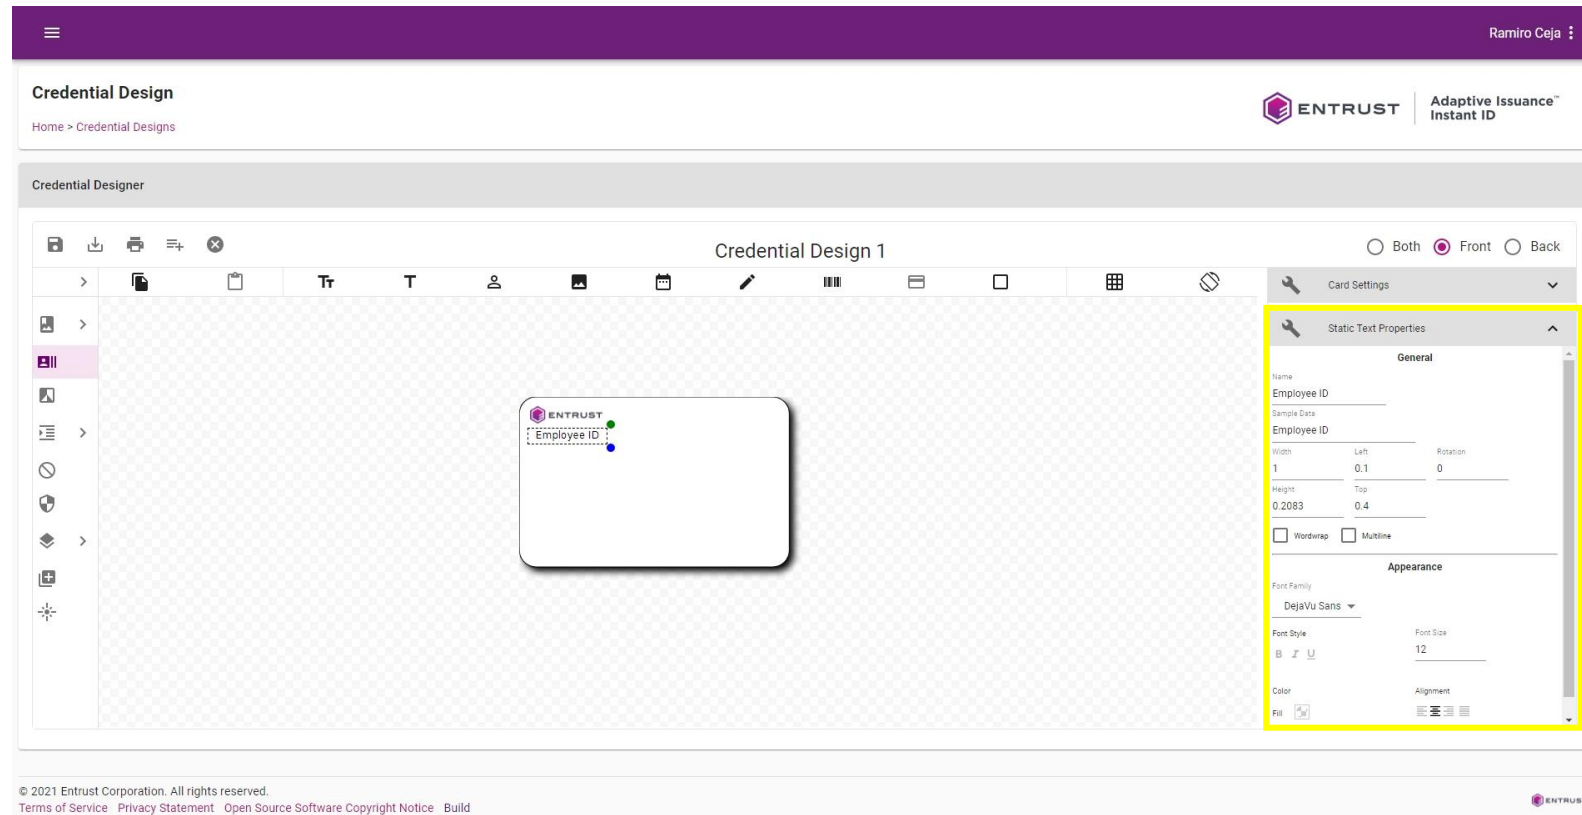

Rectangle Field

To add a **Rectangle** field, select a layer, click on the **Rectangle** icon, and then click on the credential design.

The **Rectangle** field can also be used with the **Nonprintable area** layer to define areas on the card that must not be printed over.

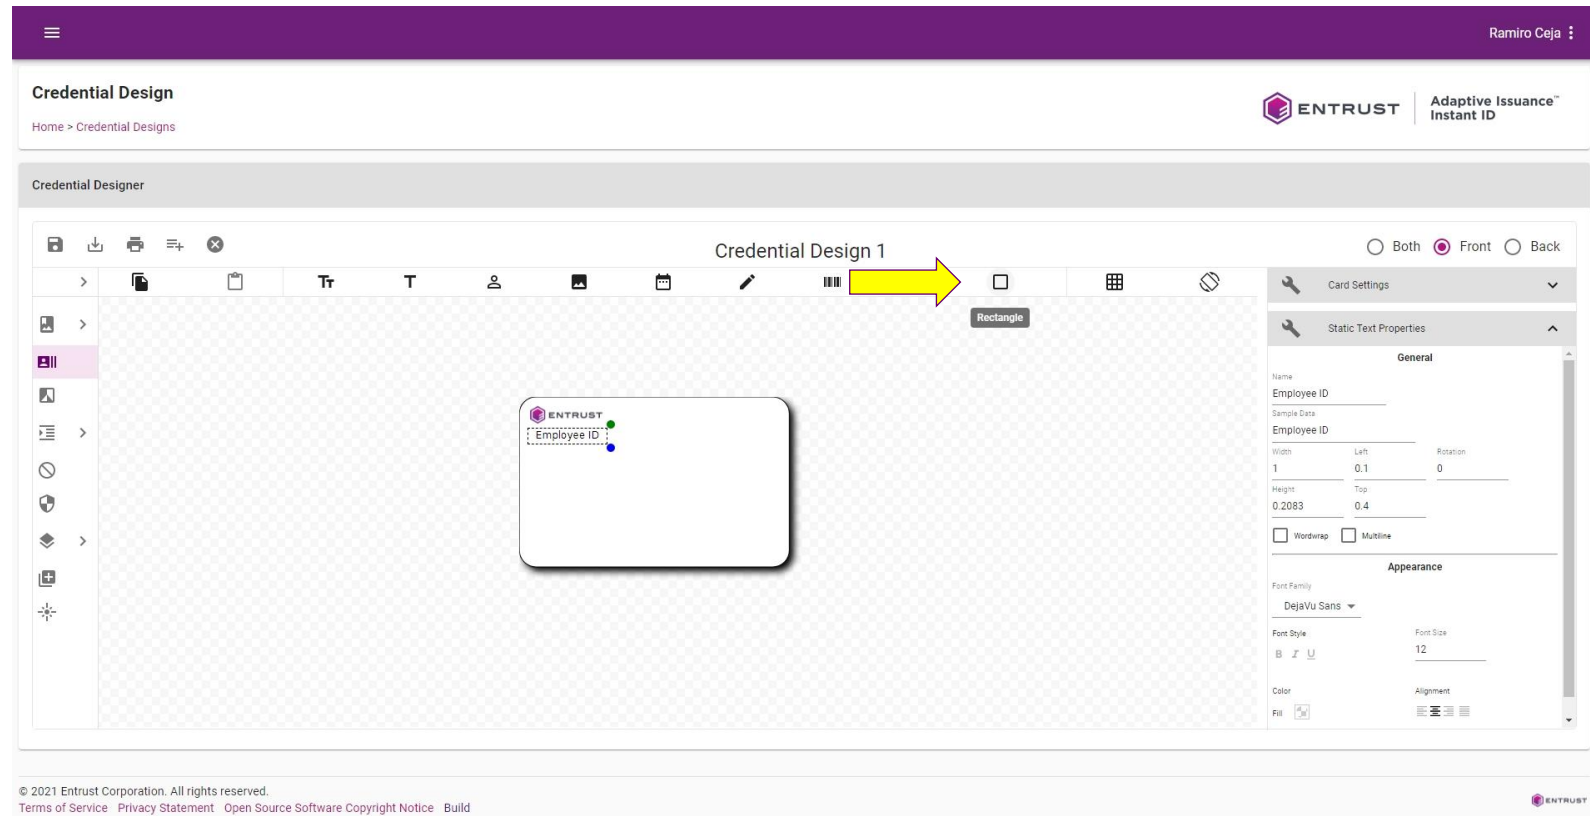

The screenshot displays the Entrust Credential Designer interface. At the top, the title bar reads "Credential Design" and "Credential Designer". The main workspace shows a credential design with a white background and a grid pattern. A yellow arrow points to the "Rectangle" icon in the top toolbar. The design includes the Entrust logo and the text "Employee ID". On the right side, there are panels for "Card Settings" and "Static Text Properties". The "Static Text Properties" panel is expanded, showing the "General" section with fields for Name, Width, Height, and Rotation, and the "Appearance" section with fields for Font Family, Font Style, Font Size, Color, and Fill. The bottom of the interface contains a footer with copyright information and navigation links.

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Rectangle Field

The software places the **Rectangle** field on the card and displays the **Rectangle Field Properties** pane.

The screenshot displays the Entrust Credential Designer interface. At the top, the header includes the Entrust logo and the text "Adaptive Issuance Instant ID". The main workspace shows a card design with a rounded rectangle field containing the text "Employee ID". A dashed border and a blue handle indicate the field is selected. On the right side, the "Rectangle Field Properties" pane is open, showing the following details:

- General**
 - Name: Rectangle Field 1
 - Width: 1, Left: 0.1
 - Height: 1.2, Top: 0.7
- Appearance**
 - Fill: [Color swatch]
 - Round Corners
 - Line Color: [Color swatch]
 - Line Weight: 1

At the bottom of the interface, there is a footer with the text: "© 2021 Entrust Corporation. All rights reserved. Terms of Service Privacy Statement Open Source Software Copyright Notice Build".

Rectangle Field

Configure the **Rectangle Field Properties**:

- Enter a name in the **Name** field.
- Modify **Width** and **Height** fields to adjust the size of the field.
- Modify **Left** and **Top** fields to adjust the position of the field.
- From the **Fill** selector, select a color for the body of the rectangle.
- Select **Round Corners** to round the corners of the rectangle.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Design 1" and shows a design canvas with a grid background. A white rounded rectangle field is placed on the canvas, containing the text "Employee ID". To the right of the canvas, a "Rectangle Field Properties" panel is open, showing the following configuration:

General	
Name	Photo Rectangle
Width	Left: 1, Right: 0.1
Height	Top: 1.2, Bottom: 0.7

Below the General section, the Appearance section includes:

- Fill: [Color Selector]
- Round Corners
- Line Color: [Color Selector]
- Line Weight: [Slider]

At the bottom of the interface, there is a footer with the text: "© 2021 Entrust Corporation. All rights reserved. Terms of Service Privacy Statement Open Source Software Copyright Notice Build".

Rectangle Field

Configure the Rectangle Field Properties:

- From the **Line Color** selector, select a color for the rectangle line.
- From the **Line Weight** list, select a thickness for rectangle line.

The screenshot displays the Entrust Credential Designer interface. The main workspace shows a credential design with a photo rectangle and an 'Employee ID' field. The 'Rectangle Field Properties' panel is open on the right, highlighting the configuration options for the selected field. The panel is divided into 'General' and 'Appearance' sections.

General

Property	Value
Name	Photo Rectangle
Width	1
Left	0.1
Height	1.2
Top	0.7


Appearance

- Fill: Round Corners
- Line Color: (Color selector)
- Line Weight: 3 (Slider)

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Text Field

To add a **Text** field, select a layer, click on the **Text** icon, and then click on the credential design.

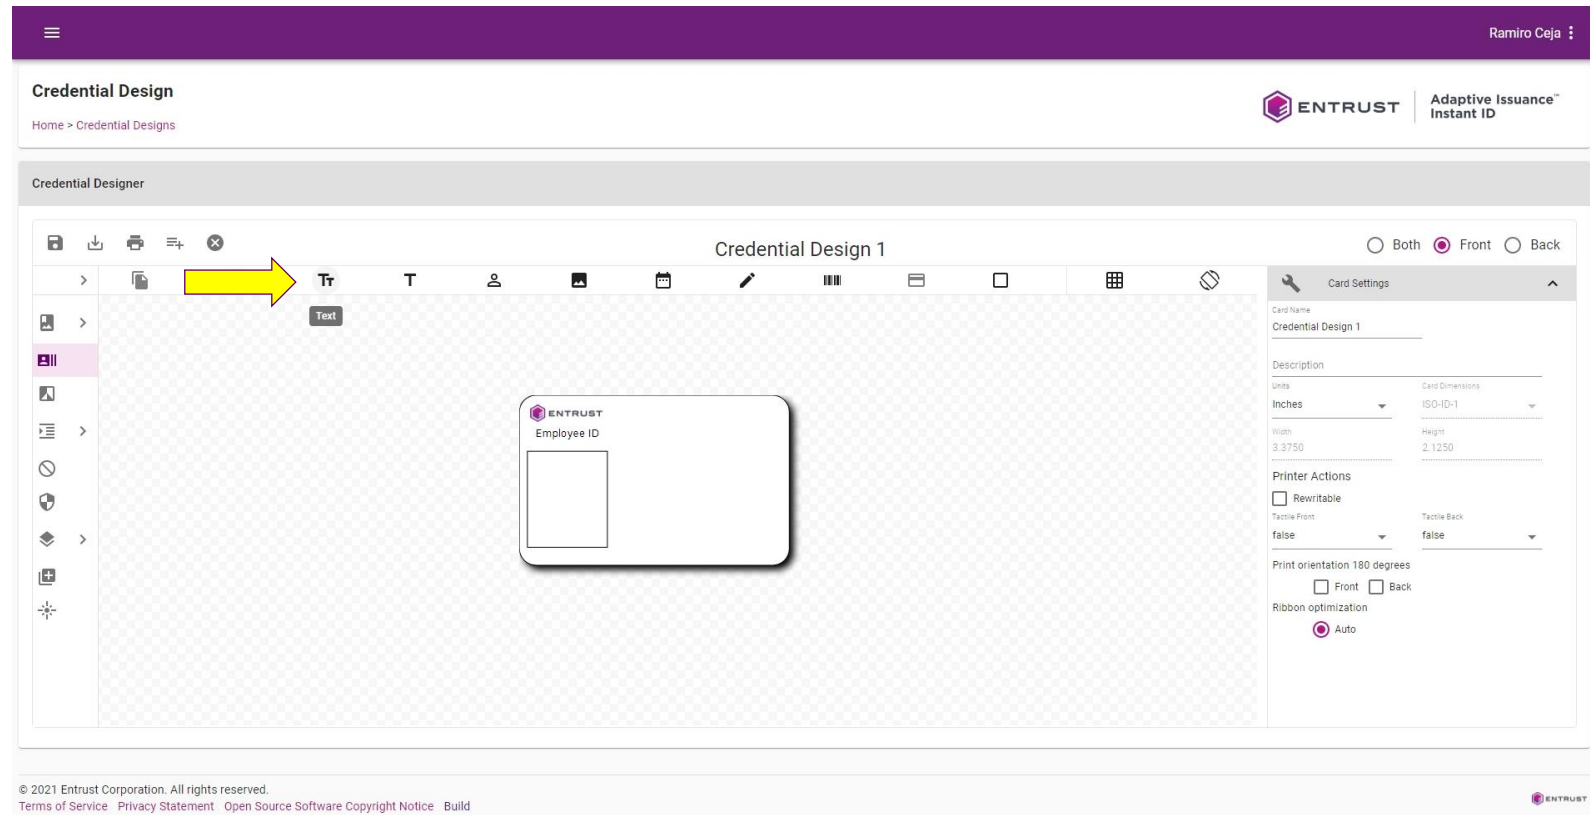

Text Field

The software places the **Text** field on the card and displays the **Text Field Properties** pane.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Design 1" and shows a card with the text "Employee ID" and a text field. The text field is highlighted with a dashed box and labeled "Text Field". To the right of the workspace, the "Text Field Properties" pane is open, showing the following settings:

- General**
 - Name: Text Field 1
 - Sample Data: Text Field
 - Width: 1, Left: 1.2, Rotation: 0
 - Height: 0.2083, Top: 0.7
 - Automatically adjust font size
- Appearance**
 - Font Family: DejaVu Sans
 - Font Style: B I U
 - Font Size: 12
 - Color: [Color Picker]
 - Alignment: [Alignment Options]

At the bottom of the interface, there is a footer with the text "© 2021 Entrust Corporation. All rights reserved." and links for "Terms of Service", "Privacy Statement", "Open Source Software Copyright Notice", and "Build".



Text Field

Enter sample data in the **Sample Data** field.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Design 1" and shows a card design with a text field labeled "Full Name". A yellow arrow points to the "Sample Data" field in the "Text Field Properties" panel on the right. The panel includes sections for "General" (Name, Sample Data, Width, Height, Rotation) and "Appearance" (Font Family, Font Style, Font Size, Color, Alignment). The "Sample Data" field is currently empty, and the "Full Name" text is visible in the design area.

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Text Field

Configure the Text Field Properties:

- Enter a name in the **Name** field.
- Modify **Width** and **Height** fields to adjust the size of the field.
- Modify **Left** and **Top** fields to adjust the position of the field.
- Enter a percentage in the **Rotation** field to rotate the field.
- Select **Automatically adjust font size** if you want the font size to automatically adjust to fit the field size.

The screenshot displays the Entrust Credential Designer interface. The main workspace shows a credential design with a text field labeled "Full Name" and a "Card Settings" panel on the right. The "Text Field Properties" panel is highlighted with a yellow border and contains the following configuration options:

- General**
 - Name: Full Name
 - Sample Data: Full Name
 - Width: 1
 - Left: 1.2
 - Rotation: 0
 - Height: 0.2083
 - Top: 0.7
 - Automatically adjust font size
- Appearance**
 - Font Family: DejaVu Sans
 - Font Style: B I U
 - Font Size: 12
 - Color: Fill
 - Alignment: Left

At the bottom of the interface, there is a footer with the following text: © 2021 Entrust Corporation. All rights reserved. Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Text Field

Configure the Text Field Properties:

- Modify the font for the text in the field:
 - Select a **Font Family**.
 - Select a **Font Style**.
 - Enter a **Font Size**.
- Select colors for the **Fill** and **Stroke** to change the color of the field.
- Select the **Alignment** for the field.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text 'Adaptive Issuance™ Instant ID'. Below the header, the main workspace is titled 'Credential Designer' and 'Credential Design 1'. The workspace contains a card with a white background and a grey border. The card has a header with the Entrust logo and the text 'Employee ID'. Below the header, there is a text field with the text 'Full Name'. The text field is highlighted with a yellow border. To the right of the workspace, there is a 'Text Field Properties' panel. The panel is divided into two sections: 'General' and 'Appearance'. The 'General' section includes fields for 'Name', 'Full Name', 'Sample Data', 'Full Name', 'Width', 'Left', 'Rotation', 'Height', and 'Top'. The 'Appearance' section includes fields for 'Font Family', 'Font Style', 'Font Size', 'Color', and 'Alignment'. The 'Font Family' is set to 'DejaVu Sans', the 'Font Size' is set to '12', and the 'Color' is set to 'Fill'. The 'Automatically adjust font size' checkbox is checked.

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Date Field

To add a **Date** field, select a layer, click on the **Date** icon, and then click on the credential design.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below this, the main workspace is titled "Credential Designer" and "Credential Design 1". A yellow arrow points to the "Date" icon in the top toolbar. The central workspace shows a credential design template with fields for "Employee ID", "Full Name", "Employee Role", and "Employee Number". On the right side, there is a "Card Settings" panel with various options for card dimensions, printer actions, and ribbon optimization. The bottom of the interface contains a footer with copyright information and links to Terms of Service, Privacy Statement, Open Source Software Copyright Notice, and Build.

Date Field

The software places the **Date** field on the card and displays the **Date Field Properties** pane.

The screenshot displays the Entrust Credential Designer interface. At the top, the title bar reads "Credential Design" with a breadcrumb "Home > Credential Designs" and the Entrust logo and "Adaptive Issuance™ Instant ID" on the right. Below this is the "Credential Designer" toolbar with various icons for editing and viewing. The main workspace shows a card design with the Entrust logo and "Employee ID" label. A date field is placed on the card, displaying "5/26/2021, 10:26:31 AM". To the right, the "Date Field Properties" pane is open, showing the "General" tab with fields for Name, Date Field 1, Sample Data, Width, Left, Rotation, Height, Top, and an option for "Automatically adjust font size". The "Appearance" tab shows Font Family (DejaVu Sans), Font Style (B, I, U), Font Size (12), Color, and Alignment options. The footer contains copyright information: "© 2021 Entrust Corporation. All rights reserved. Terms of Service Privacy Statement Open Source Software Copyright Notice Build".

Date Field

Optionally, enter a date in the **Display Text** field. By default, the software uses the current date and time.

The screenshot displays the Entrust Credential Designer interface. The main workspace shows a credential design with a date field. The date field is labeled "Date Field 1" and contains the sample data "5/26/2021, 10:26:31 AM". A yellow arrow points to the "Sample Data" field in the "Date Field Properties" panel on the right. The panel also shows settings for "Width", "Left", "Rotation", "Height", and "Top". The "Appearance" section shows the font family as "DejaVu Sans" and the font size as "12".

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Date Field

Configure the Date Field Properties:

- Enter a name in the **Name** field.
- Modify **Width** and **Height** fields to adjust the size of the field.
- Modify **Left** and **Top** fields to adjust the position of the field.
- Enter a percentage in the **Rotation** field to rotate the field.
- Select **Automatically adjust font size** if you want the font size to automatically adjust to fit the field size.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Designer" and "Credential Design 1". A central canvas shows a credential card with a date field. The date field is highlighted with a yellow border, and its properties are visible in the right-hand sidebar. The sidebar is titled "Date Field Properties" and is also highlighted with a yellow border. The properties are organized into sections: "General" and "Appearance".

General

- Name: Employee Since Date
- Sample Data: 5/26/2021, 10:26:31 AM
- Width: 2, Left: 1.2, Rotation: 0
- Height: 0.2083, Top: 1.15
- Automatically adjust font size

Appearance

- Font Family: DejaVu Sans
- Font Style: B I U
- Font Size: 12
- Color: [Color Picker]
- Alignment: [Alignment Options]

At the bottom of the interface, there is a footer with the text: "© 2021 Entrust Corporation. All rights reserved. Terms of Service Privacy Statement Open Source Software Copyright Notice Build".

Date Field

Configure the Date Field Properties:

- Modify the font for the text in the field:
 - Select a **Font Family**.
 - Select a **Font Style**.
 - Enter a **Font Size**.
- Select colors for the **Fill** and **Stroke** to change the color of the field.
- Select the **Alignment** for the field.

The screenshot displays the Entrust Credential Designer interface. The main workspace shows a credential card with a date field. The 'Date Field Properties' panel is open on the right, showing the following settings:

- General**
 - Name: Employee Since Date
 - Sample Data: 5/26/2021, 10:26:31 AM
 - Width: 2, Left: 1.2, Rotation: 0
 - Height: 0.2083, Top: 1.15
 - Automatically adjust font size
- Appearance**
 - Font Family: DejaVu Sans
 - Font Style: B I U
 - Font Size: 12
 - Color: [Color Picker]
 - Alignment: [Alignment Options]

The footer of the interface contains the following text: © 2021 Entrust Corporation. All rights reserved. Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Signature Field

To add a **Signature** field, select a layer, click on the **Signature** icon, and then click on the credential design.

The screenshot displays the Entrust Credential Designer interface. At the top, the title bar reads "Credential Design" and "Credential Designer". The main workspace shows a credential design with a signature field being added. A yellow arrow points to the "Signature" icon in the top toolbar. The credential design preview shows the Entrust logo, "Employee ID", and a signature field. The right sidebar contains "Card Settings" for "Credential Design 1", including fields for Units (Inches), Card Dimensions (ISO-ID-1), Width (3.3750), Height (2.1250), and Print orientation (180 degrees). The bottom footer contains copyright information: "© 2021 Entrust Corporation. All rights reserved." and links for Terms of Service, Privacy Statement, Open Source Software Copyright Notice, and Build.



Signature Field

The software places the **Signature** field on the card and displays the **Signature Field Properties** pane.

The screenshot displays the Entrust Credential Designer interface. At the top, the title bar reads "Credential Design" with the Entrust logo and "Adaptive Issuance™ Instant ID". Below this, the "Credential Designer" section shows a workspace for "Credential Design 1". The workspace contains a credential card with the following fields: "Employee ID", "Full Name", "Employee Role", "Employee Number", and "5/26/2021, 10:26:31 AM". A signature field is present, containing the handwritten signature "Debbie R. Howard". To the right of the workspace, the "Signature Field Properties" pane is open, showing the following settings:

General		
Name	Signature Field 1	
Alignment	Center Center	
Width	Left	Rotation
2	1.2	0
Height	Top	
0.5	1.4	

Advanced

Backdrop Removal

Display the backdrop as transparent

At the bottom of the interface, the footer contains the text: "© 2021 Entrust Corporation. All rights reserved. Terms of Service Privacy Statement Open Source Software Copyright Notice Build".

Signature Field

Configure the **Signature Field Properties**:

- Enter a name in the **Name** field.
- From the **Alignment** list, select an alignment for the field.
- Modify **Width** and **Height** fields to adjust the size of the field.
- Modify **Left** and **Top** fields to adjust the position of the field.
- Enter a percentage in the **Rotation** field to rotate the field.
- Select **Display the backdrop as transparent** to remove the background on the signature.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Design 1" and shows a preview of a credential card. The card contains the Entrust logo, "Employee ID", and a signature field with a handwritten signature "Debbie R. Howard".

On the right side of the interface, the "Signature Field Properties" panel is open, showing the following configuration:

- General**
 - Name: Employee Signature
 - Alignment: Center Center
 - Width: 2, Left: 1.2, Rotation: 0
 - Height: 0.5, Top: 1.4
- Advanced**
 - Backdrop Removal: Display the backdrop as transparent

At the bottom of the interface, there is a footer with the text: "© 2021 Entrust Corporation. All rights reserved. Terms of Service Privacy Statement Open Source Software Copyright Notice Build".

Photograph Field

To add a **Photograph** field, select a layer, click on the **Photograph** icon, and then click on the credential design.

The screenshot displays the Entrust Credential Designer interface. At the top, the page title is "Credential Design" with a breadcrumb "Home > Credential Designs". The Entrust logo and "Adaptive Issuance™ Instant ID" are in the top right. The main workspace is titled "Credential Designer" and "Credential Design 1". A toolbar at the top contains various icons, with a yellow arrow pointing to the "Photograph" icon. On the left, a vertical toolbar shows different layers, with the top layer selected. The central workspace shows a credential design template with a placeholder for a photograph. The design includes the Entrust logo, "Employee ID", and fields for "Full Name", "Employee Role", "Employee Number", and "5/26/2021, 10:26:31 AM". A signature "Debbie R. Howard" is visible. On the right, the "Card Settings" panel is open, showing options for "Units" (Inches), "Card Dimensions" (ISO-ID-1), "Width" (3.3750), "Height" (2.1250), "Printer Actions" (Rewritable, Tactile Front, Tactile Back), "Print orientation 180 degrees" (Front, Back), and "Ribbon optimization" (Auto).

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Photograph Field

The software places the **Photograph** field on the card and displays the **Photograph Field Properties** pane.

The screenshot displays the Entrust Credential Designer interface. At the top, the title bar reads "Credential Design" with the Entrust logo and "Adaptive Issuance™ Instant ID". Below this, the "Credential Designer" workspace is visible, showing a card design for "Credential Design 1". The card features the Entrust logo, "Employee ID", a photograph of a woman, and a list of fields: "Full Name", "Employee Role", "Employee Number", and "5/26/2021, 10:26:31 AM". A signature "Debbie R. Howard" is also present. The "Photo Field Properties" pane is open on the right, showing the "General" tab with the following settings:

General		
Name	Photograph Field 1	
Alignment	Center Center	
Width	Left	Rotation
1	0.1	0
Height	Top	
1.15	0.73	

Below the "General" tab, the "Border" section includes a "Display Border" checkbox, a "Weight" field, and a "Color" selector. The "Advanced" section includes a "Ghosting" checkbox. The footer of the interface contains the copyright notice: "© 2021 Entrust Corporation. All rights reserved." and links for "Terms of Service", "Privacy Statement", "Open Source Software Copyright Notice", and "Build".

Photograph Field

Configure the Photograph Field Properties:

- Enter a name in the **Name** field.
- From the **Alignment** list, select an alignment for the field.
- Modify **Width** and **Length** fields to adjust the size of the field.
- Modify **Left** and **Top** fields to adjust the position of the field.
- Enter a percentage in the **Rotation** field to rotate the field.

The screenshot displays the Entrust Credential Designer interface. The main workspace shows a credential design with a photograph field. The photograph field is highlighted with a yellow border, and its properties are visible in the right-hand panel. The properties panel is titled "Photo Field Properties" and includes the following fields:

- Name:** Employee Photo
- Alignment:** Center Center
- Width:** 1
- Left:** 0.1
- Rotation:** 0
- Height:** 1.15
- Top:** 0.73
- Border:** Display Border
- Weight:** 1
- Color:** Black
- Advanced:** Ghosting

The credential design itself shows a photograph of a woman, a signature, and text fields for "Full Name", "Employee Role", and "Employee Number". The interface includes a top navigation bar with the Entrust logo and "Adaptive Issuance™ Instant ID" text. The bottom of the screen contains copyright information and links to "Terms of Service", "Privacy Statement", "Open Source Software Copyright Notice", and "Build".

Photograph Field

Configure the Photograph Field Properties:

- Select **Display Border** to enable the border.
- From the **Weight** list, select the thickness of the border.
- From the **Color** selector, select the color for the border.
- Select **Display the photo semi-opaque** then set the **Percent Opaque** to set the opacity of the field.
- Select **Display the backdrop as transparent** to remove the background on the photograph.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Design 1" and shows a preview of a credential card. The card features the Entrust logo, "Employee ID", a photo of a woman, and text including "Full Name", "Employee Role", "Employee Number", and a date. A signature "Debbie R. Howard" is visible at the bottom of the card. To the right of the workspace, a "Photo Field Properties" panel is open, showing settings for the photo field. The "General" section includes "Name" (Employee Photo), "Alignment" (Center Center), "Width" (1), "Left" (0.1), "Rotation" (0), "Height" (1.15), and "Top" (0.73). The "Border" section has a checkbox for "Display Border" which is checked, and a "Weight" dropdown set to "1". The "Color" section shows a black color swatch. The "Advanced" section includes a "Ghosting" checkbox. The bottom of the interface contains a footer with copyright information and links for Terms of Service, Privacy Statement, Open Source Software Copyright Notice, and Build.

Bar Code Field

To add a **Bar Code** field, select a layer, click on the **Bar Code** icon, and then click on the credential design.

The screenshot displays the Entrust Credential Designer interface. At the top, the title bar reads "Credential Design" with a breadcrumb "Home > Credential Designs" and the Entrust logo. The main workspace is titled "Credential Designer" and shows a design canvas for "Credential Design 1". A yellow arrow points to the "Bar Code" icon in the top toolbar. On the canvas, a sample credential is visible with fields for "Full Name", "Employee Role", "Employee Number", and a signature. To the right, the "Card Settings" panel is open, showing options for "Units" (Inches), "Card Dimensions" (ISO-ID-1), "Width" (3.3750), "Height" (2.1250), "Printer Actions" (Rewritable, Tactile Front, Tactile Back), "Print orientation 180 degrees" (Front, Back), and "Ribbon optimization" (Auto).

Bar Code Field

The software places the **Bar Code** field on the card and displays the **Barcode Field Properties** pane.

The screenshot displays the Entrust Credential Designer interface. The main workspace shows a card design with a photo, text, and a barcode field. The 'Barcode Field Properties' pane is open on the right, showing the following settings:

General		
Name	Bar Code Field 1	
Sample Data	12345	
Alignment		
Width	Left	Rotation
2	0.1	0
Height	Top	
0.5	1.5	
Appearance		
Background	[Image Icon]	
Advanced		
Bar Code Type	Code 128 Auto	
Density	Medium	

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build



Bar Code Field

Enter sample data in the **Sample Data** field. By default, the software uses “12345”.

The screenshot displays the Entrust Credential Designer interface. The main workspace shows a credential design with a photo of Debbie Howard and a bar code field. The right-hand sidebar contains the 'Bar Code Field Properties' panel, which is currently expanded to the 'General' section. A yellow arrow points to the 'Sample Data' field, which contains the value '12345'. Below this, the 'Alignment' section includes input fields for Width (2), Left (0.1), Rotation (0), Height (0.5), and Top (1.5). The 'Appearance' section shows a 'Background' field, and the 'Advanced' section includes 'Bar Code Type' (set to 'Code 128 Auto') and 'Density' (set to 'Medium'). The top navigation bar includes the Entrust logo and the text 'Adaptive Issuance™ Instant ID'. The bottom of the interface contains a footer with copyright information and links to 'Terms of Service', 'Privacy Statement', 'Open Source Software Copyright Notice', and 'Build'.

Bar Code Field

Configure the Barcode Field Properties:

- Enter a name in the **Name** field.
- Select the **Alignment** for the field.
- Modify **Width** and **Length** fields to adjust the size of the field.
- Modify **Left** and **Top** fields to adjust the position of the field.
- Enter a percentage in the **Rotation** field to rotate the field.

The screenshot displays the Entrust Credential Designer interface. The main workspace shows a credential design with a photo, text, and a barcode field. The barcode field is highlighted with a yellow border, and its properties are visible in the right-hand panel. The properties panel is titled "Bar Code Field Properties" and includes the following sections:

- General**
 - Name: Barcode
 - Barcode: 12345
- Alignment**

	Left	Rotation
Width	2	0
Height	0.5	1.5
- Appearance**
 - Background: [Image]
- Advanced**
 - Bar Code Type: Code 128 Auto
 - Density: Medium

At the bottom of the interface, there is a footer with the text: "© 2021 Entrust Corporation. All rights reserved. Terms of Service Privacy Statement Open Source Software Copyright Notice Build".

Bar Code Field

Configure the Barcode Field Properties:

- From the **Background** color selector, select **Transparent** or **Black** to set the background of the field.
- From the **Bar Code Type** list, select a bar code format.
- From the **Density** list, select, **High**, **Medium**, or **Low**. Density sets the width of the vertical line in the bar code. **Low** sets it to four pixels, **Medium** sets it to two pixels, and **High** sets it to one pixel.

The screenshot displays the Entrust Credential Designer interface. The main workspace shows a credential design with a photo, name, and signature. A second design shows a barcode field with a dashed bounding box. On the right, the 'Bar Code Field Properties' panel is open, showing the following settings:

General		
Name	Barcode	
Sample Data	12345	
Alignment		
Width	Left	Rotation
2	0.1	0
Height	Top	
0.5	1.5	
Appearance		
Background	[Color Selector]	
Advanced		
Bar Code Type	Code 128 Auto	
Density	Medium	

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Bar Code Field

Configure the Barcode Field Properties:

- Under **Interpretation Text**, select **On** or **Off**. Interpretation displays the text encoded in the bar code beneath the bar code.
- Modify the font for the text in the field:
 - Select a **Font Family**.
 - Select a **Font Style**.
 - Enter a **Font Size**.
- From the **Alignment** list, select an alignment for the field.

The screenshot displays the Entrust Credential Designer interface. The main workspace shows a credential design with a photo, text, and a barcode. A yellow box highlights the 'Bar Code Field Properties' panel on the right. The panel includes the following settings:

- Height:** 2 (Total), 0.1 (Top), 0.5 (Bottom), 1.5 (Total)
- Appearance:** Background (Image icon)
- Advanced:** Bar Code Type: Code 128 Auto; Density: Medium
- Interpretation Text:** On, Off
- Font Family:** DejaVu Sans; **Font Style:** B, I, U; **Font Size:** 12
- Alignment:** Center Bottom

At the bottom of the interface, there is a footer with the text: © 2021 Entrust Corporation. All rights reserved. Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Magnetic Stripe

Magnetic stripe enables printers to encode data onto the magnetic stripe on a card.

Note: Magnetic stripe is only available with the Advanced edition.

Magnetic Stripe Field

To add a **Magnetic Stripe** field, select the Black layer, click on the **Magnetic Stripe** icon, and then click on the credential design.

The screenshot displays the Entrust Credential Designer interface. At the top, the title bar reads "Credential Design" and "Credential Designer". The main workspace shows a credential design with a photo, name, and signature. A yellow arrow points to the "Magnetic Stripe" icon in the top toolbar. The right sidebar contains "Card Settings" for "Credential Design 1", including fields for Units (Inches), Card Dimensions (ISO-ID-1), Width (3.3750), Height (2.1250), and Printer Actions (Rewritable, Tactile Front, Tactile Back). The bottom footer contains copyright information: "© 2021 Entrust Corporation. All rights reserved." and links for Terms of Service, Privacy Statement, Open Source Software Copyright Notice, and Build.

Magnetic Stripe Field

The software places the **Magnetic Stripe** field on the card and displays the **Magnetic Stripe Field Properties** pane.

The screenshot displays the Entrust Credential Designer software interface. The main workspace shows a card design with a photo of Debbie Howard, her signature, and a magnetic stripe field. The 'Magnetic Stripe Field Properties' pane is open on the right, showing the following details:

General	
Name	Magnetic Stripe Field 1
Width	3.375
Left	0
Height	0.5313
Top	0.1563

Advanced	
Track type	<input checked="" type="radio"/> IAT
Coercivity	High
Track 1	<input type="checkbox"/> ASCII Hex Format
Track 2	<input type="checkbox"/> ASCII Hex Format

The footer of the software interface includes the copyright notice: © 2021 Entrust Corporation. All rights reserved. and links to Terms of Service, Privacy Statement, Open Source Software Copyright Notice, and Build.

Magnetic Stripe Field

Configure the Magnetic Stripe Field Properties:

- From the **Coercivity** list, select **High** or **Low**.
- Select **ASCII Hex Format** for any track that will contain ASCII Hex characters.

The screenshot displays the Entrust Credential Designer interface. The main workspace shows two credential designs: one with a photo and text, and another with a magnetic stripe. The right-hand sidebar is open to the 'Magnetic Stripe Field Properties' panel, which is highlighted with a yellow border. The panel is divided into 'General' and 'Advanced' sections.

General Section:

- Name: Magnetic Stripe
- Width: 3.375, Left: 0
- Height: 0.5313, Top: 0.1563

Advanced Section:

- Track type: IAT
- Coercivity: High
- Track 1: ASCII Hex Format
- Track 2: ASCII Hex Format

At the bottom of the interface, there is a footer with the following text: © 2021 Entrust Corporation. All rights reserved. Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Copy

To copy a field, select the field and click on the **Copy** icon.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text 'Adaptive Issuance™ Instant ID'. Below the header, the main workspace is titled 'Credential Design 1'. A toolbar is visible, containing various icons for editing and design. A yellow arrow points to the 'Copy' icon in the toolbar. The workspace contains two credential designs: one on the left with a photo and text fields, and one on the right with a black bar and a barcode. On the right side, there are panels for 'Card Settings' and 'Static Text Properties', which are currently expanded to show 'General' and 'Appearance' settings.

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Paste

To paste a copied field, click on the front or back side of the card and click on the **Paste** icon.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Design 1". A toolbar is visible, featuring various icons for editing and design. A yellow arrow points to the "Paste" icon, which is a clipboard with a plus sign. The workspace contains two card designs: one on the left showing a sample card with a photo, name, and ID, and one on the right showing a blank card with a barcode. On the right side, there are panels for "Card Settings" and "Static Text Properties". The footer contains copyright information: "© 2021 Entrust Corporation. All rights reserved." and links to "Terms of Service", "Privacy Statement", "Open Source Software Copyright Notice", and "Build".

Save

To save changes to the credential design, click on the **Save** icon.

The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text "Adaptive Issuance™ Instant ID". Below the header, the main workspace is titled "Credential Designer" and "Credential Design 1". A yellow arrow points to the "Save" icon in the top-left corner of the design area. The design area shows two views of a credential: the front view on the left and the back view on the right. The front view includes the Entrust logo, "Employee ID", a photo of a woman, and her signature "Debbie Howard". The back view shows a barcode and a black header. On the right side, there is a "Card Settings" panel with various options like "Units", "Card Dimensions", "Printer Actions", and "Ribbon optimization".

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Save As

To save with a different file name, click on the **Save As** icon.

The screenshot displays the Entrust Credential Designer web application. At the top, there is a purple navigation bar with a menu icon on the left and the user name 'Ramiro Ceja' on the right. Below this is a white header area containing the text 'Credential Design' and 'Home > Credential Designs' on the left, and the Entrust logo and 'Adaptive Issuance™ Instant ID' on the right. The main workspace is titled 'Credential Designer' and 'Credential Design 1'. A toolbar at the top of the workspace includes icons for Save, Save As (highlighted with a yellow arrow), Print, Copy, Paste, Undo, Redo, and other design tools. The central canvas shows two credential designs: one on the left with a photo, name 'Debbie Howard', and employee details, and one on the right with a barcode. On the right side, there is a 'Card Settings' panel with various configuration options like 'Units', 'Card Dimensions', 'Printer Actions', and 'Ribbon optimization'. The footer contains copyright information: '© 2021 Entrust Corporation. All rights reserved.' and links to 'Terms of Service', 'Privacy Statement', 'Open Source Software Copyright Notice', and 'Build'.



Save As

Enter a name and
click on **SAVE**.

The screenshot displays the Entrust Credential Designer interface. At the top, the title is "Credential Design" with a breadcrumb "Home > Credential Designs". The user "Ramiro Ceja" is logged in. The main workspace shows a credential design for "Employee ID" with fields for "Full Name", "Employee Role", "Employee Number", and a signature. A dialog box titled "Save as a new credential design" is open, with the "Name" field containing "Entrust". The "SAVE" button is highlighted with a yellow arrow. The right sidebar shows "Card Settings" with options for "Card Name", "Description", "Units", "Card Dimensions", "Printer Actions", "Print orientation 180 degrees", and "Ribbon optimization".

Print Sample

To print a sample credential, click on the **Print Sample** icon.

The screenshot displays the Entrust Credential Designer web application. At the top, the header includes the Entrust logo and the text "Adaptive Issuance™ Instant ID". The main workspace shows a sample credential card with the following details:

- ENTRUST Employee ID
- Full Name
- Employee Role
- Employee Number: 5/26/2021, 10:26:31 AM
- Signature: Debbie R. Howard


A yellow arrow points to the "Print Sample" icon in the top toolbar. On the right side, the "Card Settings" panel is visible, showing options for units (Inches), card dimensions (ISO-ID-1), width (3.375), height (2.125), and printer actions (Rewritable, Tactile Front, Tactile Back, Print orientation 180 degrees, Ribbon optimization).

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build

Print Sample

To print a sample credential:

- From the **Select sides to print list**, select a side of the card to print.
- From the **Printer list**, select a printer.
- From the **Hopper list**, select a hopper.
- Click on **PRINT**.

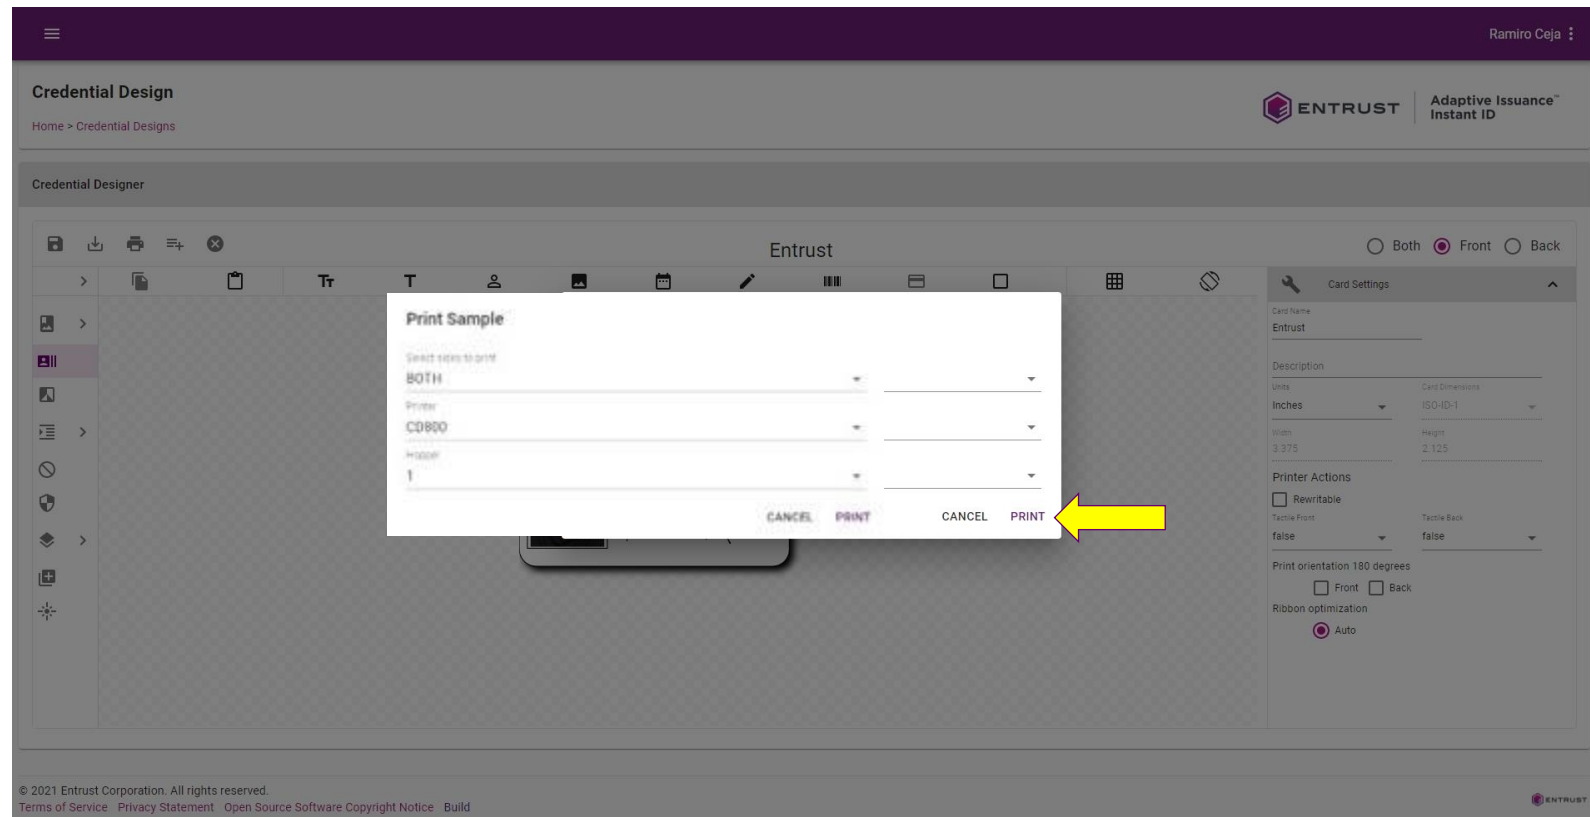

Generate Enrollment

To generate an enrollment form based on the credential design, click on the **Generate Enrollment** icon.


The screenshot displays the Entrust Credential Designer interface. At the top, there is a purple header with the Entrust logo and the text 'Adaptive Issuance™ Instant ID'. Below the header, the main workspace is titled 'Credential Designer'. A toolbar is visible, featuring various icons for design and management. A yellow arrow points to the 'Generate Enrollment' icon, which is represented by a document with a plus sign. The central workspace shows a preview of a credential card with the following details: Entrust logo, Employee ID, Full Name, Employee Role, Employee Number (5/26/2021, 10:26:31 AM), a photo of a woman, and a signature 'Debbie R. Howard'. On the right side, there is a 'Card Settings' panel with various configuration options, including 'Units' (Inches), 'Card Dimensions' (ISO-ID-1), 'Width' (3.375), 'Height' (2.125), 'Printer Actions' (Rewritable, Tactile Front, Tactile Back), 'Print orientation 180 degrees' (Front, Back), and 'Ribbon optimization' (Auto).

© 2021 Entrust Corporation. All rights reserved.
Terms of Service Privacy Statement Open Source Software Copyright Notice Build




Generate Enrollment

The enrollment form is created.

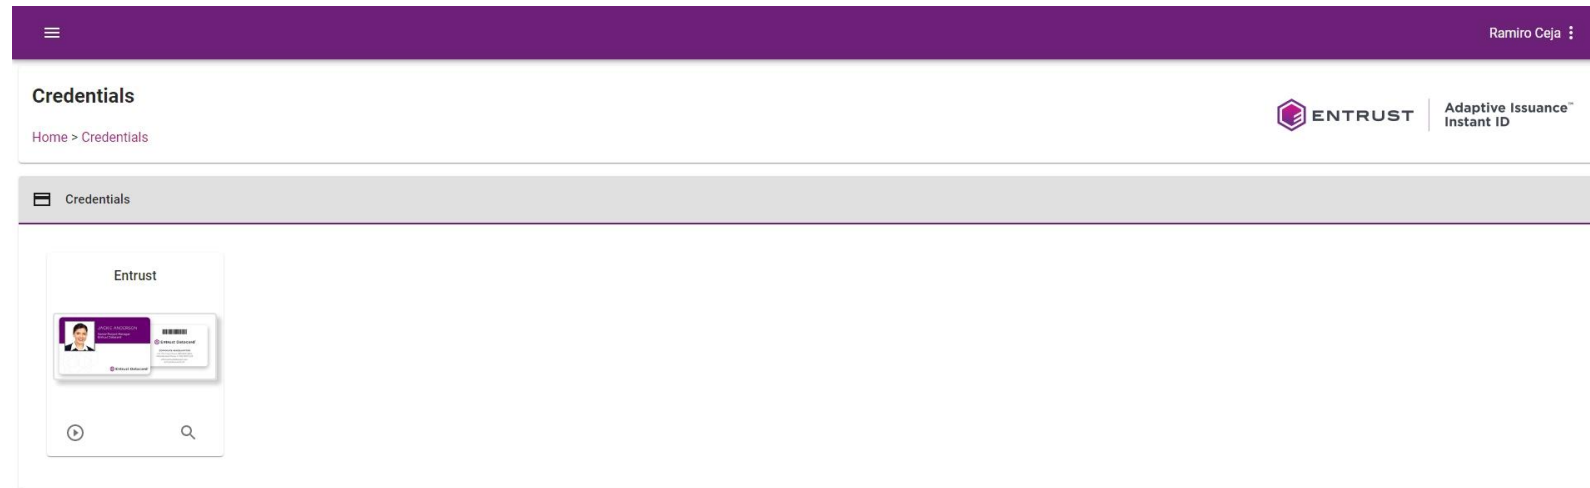

Close

To close a credential design, click on the **Close** icon.

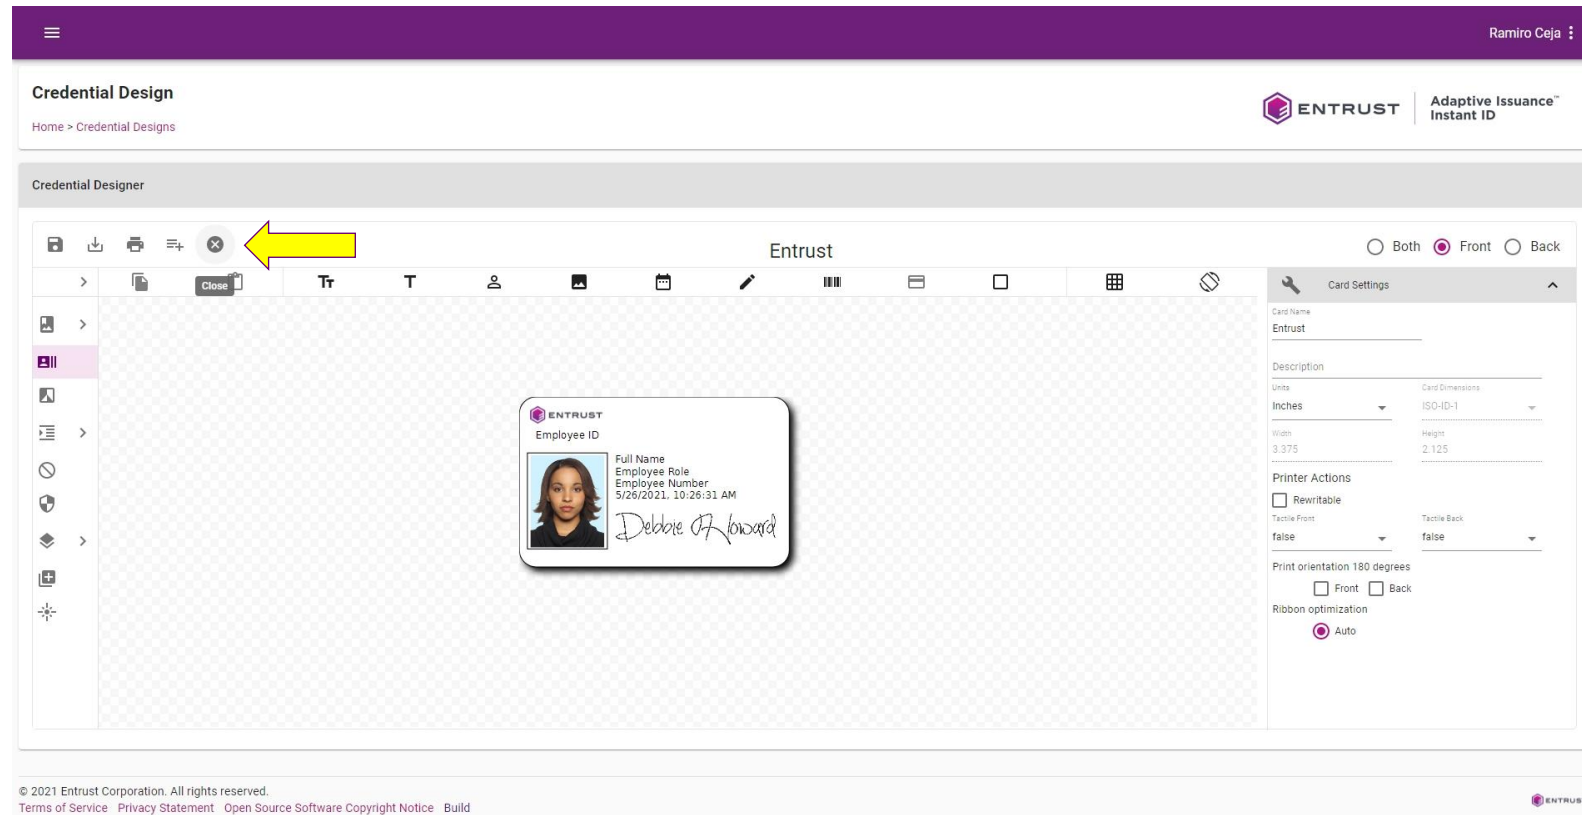

Note: A warning will display before closing if you have made changes to the credential design.

Close

If you are sure that you want to close the credential design, click on **YES**.

